

## **OPERATION MANUAL**

EN | Original

MU-M/F Vario

**FROM PRODUCTION** 2018

**EDITION** 12.2022

**REFERENCE NUMBER** MU-M-F\_BA\_18\_DE\_2022-11

## Machine identification

In order for your dealer to assist you as efficiently as possible, you will need to provide some information about your machine.

Please enter the information here.

Designation

Working width

Weight

Machine number

Additional equipment

Dealer's address

Manufacturer's address

Müthing GmbH & Co. KG Soest  
Am Silberg 23  
59494 Soest  
Germany

# Handover declaration

- Fill out this sheet with your dealer.
- Then separate this sheet from the operating manual and send it to the manufacturer within 10 days of delivery. Only in this way will the guarantee be effective from the date of delivery

To  
Müthing GmbH & Co. KG Soest  
Am Silberberg 23  
59494 Soest  
Germany

I have bought the machine described below from Müthing GmbH & Co. KG Soest, and confirm full delivery and handover of the machine including the operating manual and spare parts list, as well as training in operating the devices with safety instructions and warning information from your dealer.

I confirm additionally that I have read and understood the operating manual and am in agreement with the information contained therein. This applies in particular to the chapter Safety.

Client

Name		First name	
Address			
Post code		Town/city	
Telephone		Fax	
E-mail		Date	

Machine

Machine	MU-	Serial number	
Working width		Gear-box	
Rigid mounting		Non-rigid mounting	
Year of construction		Delivery date	
Delivered by			

\_\_\_\_\_  
Signature of client

\_\_\_\_\_  
Signature and stamp of sales partner

# Handover declaration

# Handover declaration – Copy

– This sheet remains with the client in the operating manual

I have bought the machine described below from Mühling GmbH & Co. KG Soest, and confirm full delivery and handover of the machine including the operating manual and spare parts list, as well as training in operating the devices with safety instructions and warning information from your dealer.

I confirm additionally that I have read and understood the operating manual and am in agreement with the information contained therein. This applies in particular to the chapter Safety.

Client

Name		First name	
Address			
Post code		Town/city	
Telephone		Fax	
E-mail		Date	

Machine

Machine	MU-	Serial number	
Working width		Gear-box	
Rigid mounting		Non-rigid mounting	
Year of construction		Delivery date	
Delivered by			

\_\_\_\_\_  
Signature of client

\_\_\_\_\_  
Signature and stamp of sales partner



# Table of contents

<b>Handover declaration</b> .....	<b>3</b>	<b>Cleaning and care</b> .....	<b>41</b>
<b>Handover declaration – Copy</b> .....	<b>5</b>	Cleaning	41
<b>About this operating manual</b> .....	<b>8</b>	Care	41
Target group	8	<b>Parking and storage</b> .....	<b>42</b>
Safety	8	Setting down the machine in a	
Instruction	8	secure position	42
Other applicable documents	8	Storing the machine	47
Symbols	9	<b>Maintenance</b> .....	<b>48</b>
<b>Safety</b> .....	<b>10</b>	For your safety	48
For your safety	10	General information	49
Warning signs	10	Maintenance intervals and setting work	52
Definitions	13	Lubricating work	53
Who is allowed to operate the machine?	13	PTO shaft	55
Coupling	14	Extension shaft	57
Centre of gravity	15	Transmission oil	58
Road transport	17	Tools	60
Putting the machine into operation	17	V-belt	61
Uncoupling the machine	19	Runners	64
Care and maintenance	19	<b>Accessory</b> .....	<b>65</b>
Further regulations	20	short-chopping bar	65
<b>Familiarising yourself with the machine</b> .	<b>21</b>	Cutting bar	65
Range of application of the machine	21	Additional guard	65
Features of the machine	22	Operating hours counter	66
Designation of components	23	<b>Fault elimination</b> .....	<b>67</b>
Technical specifications	24	<b>Disposal of the machine</b> .....	<b>69</b>
<b>Delivery and assembly</b> .....	<b>26</b>	<b>EU-conformity declaration</b> .....	<b>70</b>
Checking the scope of delivery	26	EC Directive	
<b>Coupling the machine</b> .....	<b>27</b>	2006/42/EG	70
Work position	27	<b>UK Declaration of Conformity</b> .....	<b>71</b>
Transport position	29	UKCA	71
PTO shaft	30		
Hydraulics	32		
Electrics	32		
<b>Preparation</b> .....	<b>33</b>		
Working width	33		
Cutting bar [+]	34		
<b>Driving on the road</b> .....	<b>35</b>		
Pin	35		
Warning signs [+]	36		
Transport without coupling	36		
<b>Mulching</b> .....	<b>37</b>		
Work position	37		
Pin	37		
Task	38		

# About this operating manual

## Target group

This operating manual is intended for trained machine operators and persons who are otherwise qualified to carry out landscape work and who have received training in how to use this machine.

## Safety

Familiarise yourself with the contents of this operating manual which are relevant for your activity before commissioning or assembling the machine. Always read through the safety instructions in the chapter "Safety" and observe the warning information in the individual chapters. In this way, you will achieve optimum work results and operational safety.

## For the employer

Staff must be instructed in the safe handling of the machine before the initial commissioning. Untrained or unauthorised persons are not permitted to use the machine.

The following are included in this training:

- Checking that staff possess the necessary requirements for safely handling the machine.
- Handing out the operating manual and the other relevant and applicable documents or an intensive course of training which, in particular, includes the safe handling of the machine.

## Regular instruction sessions

Instruct your staff regularly, but at least once a year, concerning the basic procedural measures for safely handling the machine.

## Instruction

You will receive training from your dealership concerning using the controls, safe operation and care of the machine. Commissioning without first receiving training is not permitted.

## Other applicable documents

In addition to the operating manual, other documents also form an integral part of the machine:

EU-conformity declaration	Integral part of this operating manual → Chapter »EU-conformity declaration«, Page 70
Spare parts list	Integral part of the delivery with this machine
PTO shaft operating manual	Integral part of the delivery with this machine



# About this operating manual

## Symbols

In order to make this manual clear and easy to read, we have used various symbols. They are explained below:

- A bullet point accompanies each item in a list
- ▶ A triangle indicates operating functions which must be performed
- An arrow indicates a cross-reference to other sections of this manual
- [+] A plus sign indicates an accessory that is not included in the standard version.

## Pictograms

We have also used pictograms to help you find instructions more quickly:



The warning triangle indicates warning information. Failure to observe these safety instructions can result in:

- Moderate to serious injury
- Fatal injury

You will find the warning information associated with individual operations, where it is important to observe the warning information before these operations are carried out.

You will also find safety instructions in the chapter »Safety« which cannot be assigned to any particular operations, but increase your ability to work safely in different situations.



This sign indicates important instructions regarding the machine. Failure to observe these safety instructions can result in:

- Serious faults in the correct operation of the machine.
- Damage to the machine



This symbol indicates information, tips and instructions about operation.



This symbol indicates tips for assembly or adjustment work.



This symbol indicates examples that help you to understand the instructions better.

Parts in the text which refer to individual machines or to conditions have a colored background. After the colored section, the text then applies again to all machines. For example:

### **Only for MU-Farmer/S with pneumatic brake system**

- ▶ Connect brake hoses
- ▶ Connect hydraulic hoses

# Safety

## For your safety

This chapter contains general safety instructions. Each chapter of the operating manual contains additional warning instructions which are not described here. Observe the safety instructions:

- In the interest of your own safety,
- In the interest of the safety of others
- To ensure the safety of the machine


Numerous risks can result from handling landscaping machines the wrong way. Therefore, always work with particular care and never under time pressure.

### For the employer

Inform personnel working with the machine of these safety instructions at regular intervals and according to statutory regulations.

## Warning signs

On the machine you will find labels that serve to ensure your safety. The labels must not be removed. If labels become illegible or begin to peel off, new labels can be ordered and attached in the appropriate places.

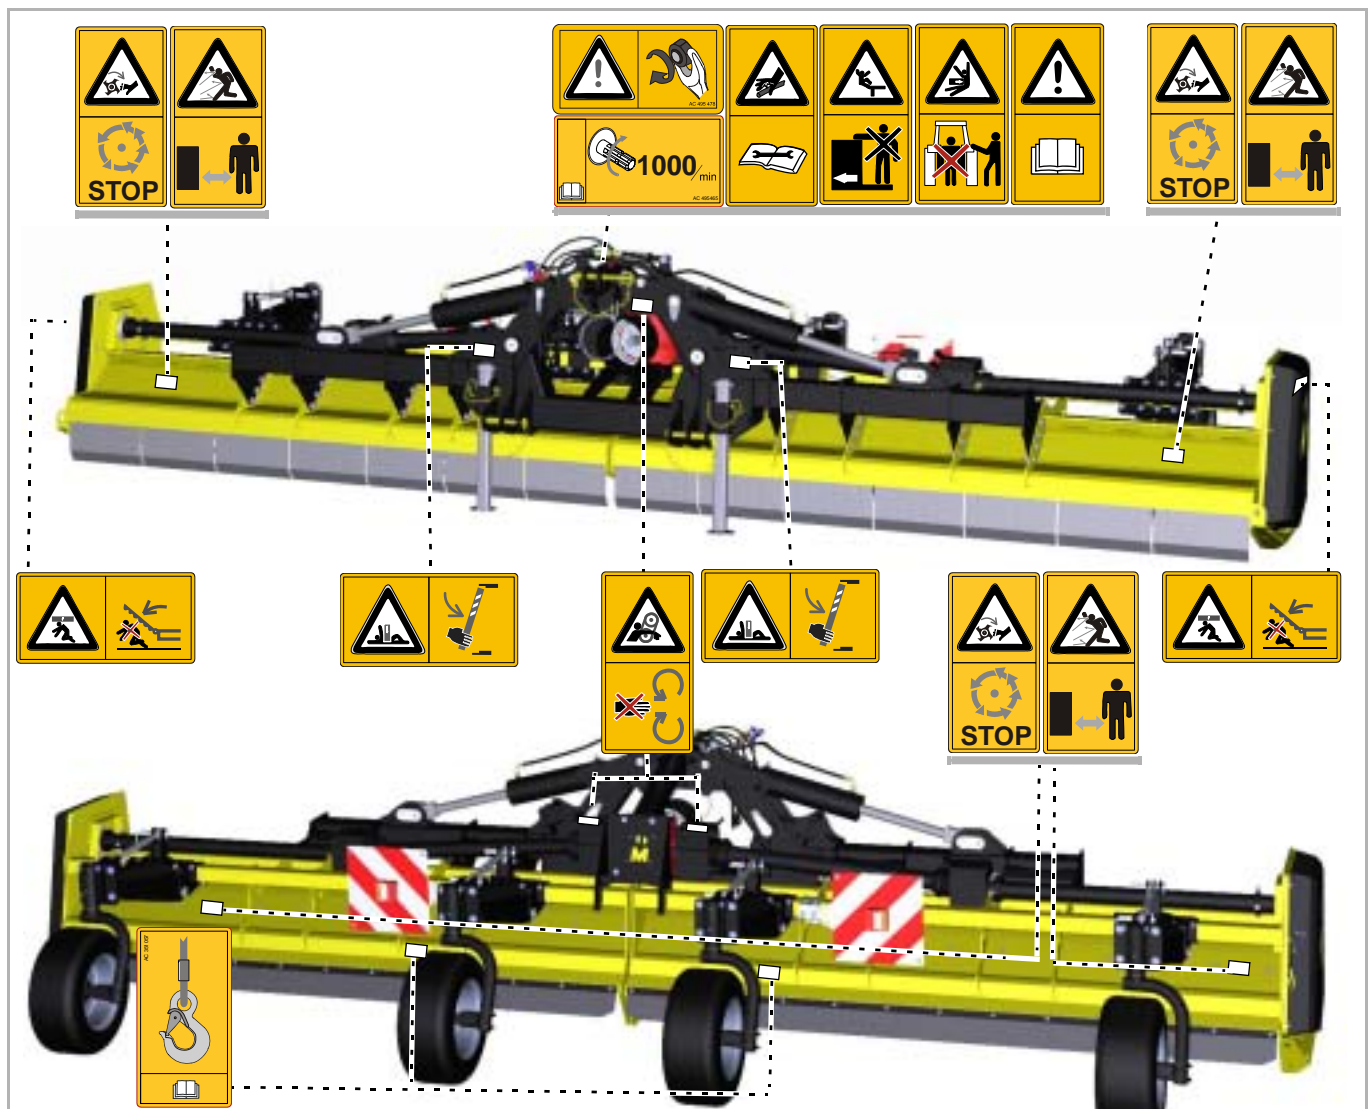

## Meaning of warning signs



**Read the operating manual carefully and follow the instructions**  
Commissioning of the machine must not take place before the operating manual has been read and understood. This particularly applies to safety instructions.



**Do not stand between the tractor and the machine**  
Standing between the tractor and the machine with the engine running is prohibited, especially during coupling and uncoupling. The tractor must be additionally secured against rolling away.



**Riding on the machine is prohibited**  
It can result in serious or even fatal injury.



**Proceed with great care in the event of leaking hydraulic fluid**  
Do not look for leakage points without correct protection. Fine oil jets could penetrate eyes and skin under high pressure. Observe the corresponding safety instructions in the operating manual.



**Do not remove protective devices**  
Never open or remove the protective devices while the tractor's engine is running. Never operate the machine without the protective device.



**Be aware of the danger of being pulled in**  
There is a danger of being pulled into the PTO shaft in the event of inappropriate use.



**Shackles**  
Only raise the machine using loading equipment at the points indicated.



## Rotating and trailing machine parts

Only approach the machine when all machine parts have stopped moving.



## Danger of objects being thrown out

During operation, there is a danger of objects such as stones being picked up and thrown out by the machine. Ensure that no persons are present in the hazard area.



## Danger from moving machine parts

Nobody is permitted to remain within the hazard area during operation.




## Caution, risk of tipping

The machine or parts can tip over. Attach the safety supports before you stand in the hazard area. To uncouple, use the struts provided and position on firm ground.



## Do not stand in the slewing range

There is an extreme risk of injury within the slewing range from slewing or folding machine parts.



## Check the rotational speed of the PTO stub shaft

Connect PTO shaft to a PTO stub shaft with an appropriate rpm. Always switch off the PTO stub shaft when working on the machine.




## Retighten screws

After the first hours of operation, and as required, all screws must be checked and tightened if necessary. Vibrations might have loosened the screwed connections.

## Definitions

All direction information is given in relation to the direction of travel of the machine:

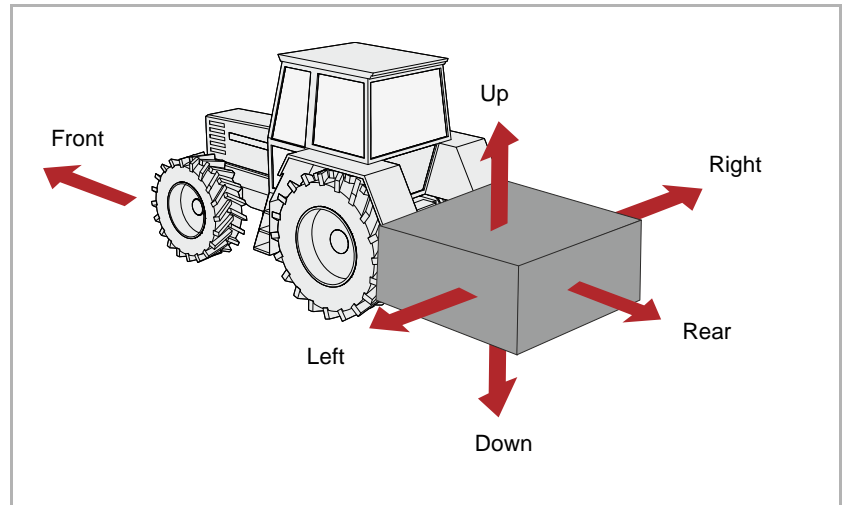

Who is allowed to operate the machine?

### **Only qualified personnel**

Only qualified persons who have been informed of the dangers associated with handling the machine are permitted to operate, service or repair the machine. As a rule, such persons are trained and experienced in agricultural work or have been thoroughly trained in a similar fashion.

## Coupling

### **Increased risk of injury**

When the machine is being coupled to the tractor, there is an increased risk of injury. Therefore:

- Only couple the machine with the road chassis raised
- Secure the tractor against rolling away
- The tractor and machine must belong to the same category
- Never stand between the tractor and the machine during coupling
- Actuate the three-point power lift system slowly and carefully

Failure to observe these instructions can result in serious or fatal injury.

### **Connect electric wires or cables only after mounting the attachment**

The electrical supply to the tractor must not be connected when the lighting equipment is being fitted. Short circuits and damage to the electronics are possible.

### **Only connect hydraulics at zero pressure**

Only connect hydraulic hoses to the tractor hydraulic system if the tractor and machine hydraulic system is at zero pressure. A hydraulic system under pressure can trigger unpredictable machine movements.

### **High pressures in the hydraulic system**

The hydraulic system is under high pressure. Regularly check all lines, tubes and screwed connections for leaks and externally visible damage. Only use suitable tools when looking for leaks. Rectify any damage immediately. Oil escaping under pressure may result in injuries and fires. In the event of injuries, seek medical attention immediately.

### **Color-coded hydraulic hoses**

To prevent operating errors, plug sockets and plugs for hydraulic connections between the tractor and the machine must be color-coded. Wrongly connected hydraulic hoses can trigger unpredictable movements of the machine.

## Centre of gravity

### Observe the total weight, axle loads, tyre load-bearing capacity and minimum ballast specifications

The front or rear mounting of machines must not cause the carrier vehicle's permissible total weight, permissible axle loads, or tyre load-bearing capacity to be exceeded. The front axle must bear at least 20 % of the empty weight of the carrier vehicle to ensure steering capability.


You can calculate:

- Total weight
- Axle loads
- Minimum added weight

## Data

For this calculation, some data is required out of the following documents and measurement results:

- Operating manual of carrier vehicle
- This operating manual
- Measurement results from carrier vehicle and attached machine

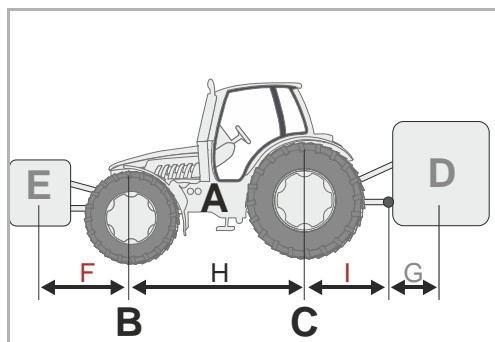

Data from the operating manual of the carrier vehicle:

- (A) unladen weight
- (B) front axle load
- (C) rear axle load
- (H) wheel base of carrier vehicle

Please take into consideration, for example, the weight of water in the tyres, accessories, etc.

Data from this operating manual:

- (D) Total weight of the machine when rear-mounted; the supporting load with the machines attached
- (E) Total weight of the machine when front-mounted
- (G) Distance between the lower link ball midpoint and the machine's centre of gravity when rear-mounted. With machines attached,  $G=0$ .

Data which you can determine by measuring:

- (F) Distance between the machine's centre of gravity when front-mounted and the front-axle midpoint
- (I) distance between the rear axle midpoint and the lower link ball midpoint. For rear-mounted machines between rear axle midpoint to drawbar coupling midpoint or hitch ball

# Safety

## Calculation

The measured values can now be inserted into the formulas.

### Ballast with front weights

Calculating the **ballast with front weights** on rear-mounted machines.

$$\text{Front ballast in kg} = \frac{D \times (I + G) - (B \times H) + (0,2 \times A \times H)}{F + H}$$

### Ballast with rear weights

Calculating the **ballast with rear weights** on front-mounted machines.

$$\text{Rear ballast in kg} = \frac{(E \times F) - (C \times H) + (0,45 \times A \times H)}{H + I + G}$$

### Front axle load

Calculating the **actual front axle load**

$$\text{Front axle load in kg} = \frac{E \times (F + H) + (B \times H) - D \times (I + G)}{H}$$

### Total weight

Calculating the **actual total weight**

$$\text{Total weight} = E + A + D$$

### Rear axle load

Calculating the **actual rear axle load**

$$\text{Rear axle load in kg} = \text{actual total weight} - \text{actual front axle load}$$

### Tyre load-bearing capacity

Data on the tyre load-bearing capacity of the front and rear tyres can be found in the tyre manufacturer's documentation.

- The front tyre load-bearing capacity for two wheels is equal to twice the permissible tyre load-bearing capacity of a single front wheel.
- The rear tyre load-bearing capacity for two wheels is equal to twice the permissible tyre load-bearing capacity of a single rear wheel.

## Summary

Check if the following conditions are met:

- The actual rear axle load is less than the permissible values for the axle load stated in the operating manual of the carrierer vehicle
- The actual total weight is less than the permissible values for the total weight stated in the operating manual of the carrierer vehicle
- The sum of the permissible rear wheel load capacity is higher than the real rear wheel load capacity
- The sum of the permissible front wheel load capacity is higher than the real front wheel load capacity

If all conditions are met, the machine may be attached to this carrier vehicle.



You can use a sufficiently large weigh-bridge to determine the total weight, the rear axle load and the front axle load by weighing.



## Road transport

### **Make sure that the condition of the machine conforms to traffic regulations**

The machine must conform to current traffic regulations if you intend to drive it on public roads. This includes for example:

- Fitting lighting equipment, warning devices and protective devices
- Observing the permissible transport widths, transport weights, axle loads, tyre load-bearing capacity and total weights

The driver and owner of the vehicle are liable if traffic regulations are not observed.

### **Closing ball valves**

If ball valves are provided on the hydraulic lines or the chassis cylinders, the ball valves must be closed for road transport. Accidental actuation of control devices on the tractor might otherwise cause movements in the machine. Accidents or damage to the machine may be caused as a result.

### **Check release cable for the quick-release coupling**

Release cables must hang loose and must not, when in their lowered position, release the couplings of their own accord. Attached machines might otherwise come loose from the three-point linkage of their own accord.

### **Riding on the machine is strictly prohibited**

People or objects must never be transported on the machine. Riding on the machine poses a risk to life and limb and is strictly prohibited.

### **Take altered driving and braking behaviour into account**

Driving and braking performance is altered when the machine is attached to the tractor. Take the width and balancing weight of the machine into consideration, especially when cornering. A driving style which not adjusted to the road conditions can lead to accidents.

### **Drive at a suitable speed**

Always adjust your driving speed to the road conditions. Driving at excessive speeds in poor road conditions may create extremely large forces, which will severely load or overload the tractor and the machine. Driving at unsuitable speeds can cause machine damage and lead to accidents.

### **Training required before commissioning**

The machine must not be put into operation until the user has been given proper training by an employee of the dealer, a factory representative, or an employee of the manufacturer. Commissioning without training can lead to damage to the machine due to false operation or accidents can happen.

### **Ensure that the machine is in perfect working condition**

Do not operate the machine unless it is in perfect working condition. Check all important components and replace any defective components before starting the machine. Defective components can cause damage to equipment and personal injury.

## Putting the machine into operation

## **Do not remove the protective equipment**

The protective equipment must not be removed or by-passed. Check all protective equipment before starting the machine. Unprotected machine parts can cause serious or fatal injury.

## **Riding on the machine is strictly prohibited**

People or objects must never be transported on the machine. Riding on the machine poses a risk to life and limb and is strictly prohibited.

## **Height of the machine and overhead power lines**

If a height of 4.00 m is exceeded when folding the machine in and out, the machine must not be folded in the vicinity of live overhead power lines. Danger of electrocution! Should the machine come into contact with a live overhead power line:

- Do not attempt to exit the tractor cabin
- Do not touch any metal parts on the tractor
- Do not create any conductive contact with the ground
- Warn all persons in the area not to approach the tractor or the machine
- Wait for help from professional emergency service personnel as power in the live overhead power line must first be switched off

Never climb onto the machine beneath live overhead power lines. The voltage can jump across even if the lines are not actually touching the machine.

## **Check the hazard area**

The hazard area in front of and behind the machine is 30 m, and 10 m at the sides. Before driving off, folding out, and operating the machine and during operation, check its hazard area. Make sure that you have an adequate view. Do not begin work until the hazard area is cleared of any persons or objects.

Parts could be ejected from the machine at high speed in certain circumstances. The hazard area, particularly in front of and behind the machine, must be cleared of any persons, animals or objects before starting.

Any use of the machine without verification of the hazard area can lead to serious or fatal accidents.

## **Retighten all nuts, bolts and screws**

Nuts, bolts and screws should be checked at regular intervals and tightened if necessary. Screws can come loose unnoticed while operating. Damage to the machine or accidents may be caused as a result.

## **What to do in the event of a fault**

In the event of a malfunction, shut down and secure the machine immediately. The fault may be eliminated immediately, or a specialist workshop must be assigned the task. Further operation of the machine can lead to damage to the machine or injury to persons.

## Uncoupling the machine

### **Increased risk of injury**

There is an increased risk of injury when uncoupling the machine from the tractor. Therefore:

- Secure the tractor against rolling away
- Never stand between the tractor and the machine during uncoupling
- Actuate the three-point power lift system slowly and carefully
- Make sure the machine is standing on a secure and level surface
- Do not disconnect hydraulic hoses until there is no pressure in the tractor and machine hydraulic system

Failure to observe these instructions can result in serious or fatal injury.

## Care and maintenance

### **Observe the care and maintenance intervals**

Observe prescribed intervals for maintenance checks and inspections specified in the operating manual. If these periods are not observed, this can lead to damage to the machine, poor quality of work or accidents.

### **Use replacement parts with identical properties**

Many components have special properties that are essential for the stability and correct operation of the machine.

When replacing components, dimensions, stability and material quality must be guaranteed. We recommend the exclusive use of original replacement parts.

Use of replacement parts which do not correspond to requirements could cause damage to the machine or impaired performance.

### **When performing any care and maintenance work:**

- Switch off the PTO stub shaft
- Depressurise the hydraulic system
- Whenever possible, uncouple the tractor
- Make sure the machine is standing securely. Provide additional support as required
- Do not use parts of the machine as climbing aids; use only secure steps, ladders or other means of access
- Secure the machine against rolling away
- Never reach into the V-belt while it is moving

It is only possible to guarantee work safety during care or maintenance work through observing these regulations.

### **Turn off the electrical supply**

Prior to carrying out work on the electrical system, disconnect the system from the power supply. Systems supplied with electrical power can cause damage to equipment and personal injury.

## **Replace hydraulic hoses**

Replace hydraulic hoses every six years. Hydraulic hoses can age without any externally visible damage. Defect hydraulic lines can lead to severe or fatal injuries.

## **Caution when cleaning with a high-pressure cleaner**

The machine can be cleaned using either water or a steam jet. Only use a low pressure to clean bearings, fans, signal mixer units, plastic parts and hydraulic hoses. Excessively high pressures can cause damage to these parts.

## **Before carrying out welding work, disconnect the battery and alternator**

Before carrying out any electric welding work on the attached machine, disconnect the tractor battery and the alternator. This avoids damage to the electrical system.

## **Tighten all screwed connections**

All screw connections that are released during maintenance and repair work must now be retightened. Loose screwed connections can cause bolts to undo without you noticing during your work. As a result, machine parts can become detached. Otherwise, this may result in severe injury or damage to equipment.

## Further regulations

### **Observe the regulations**

In addition to these safety instructions, observe the following:

- Accident prevention regulations
- Generally recognised safety regulations, occupational health requirements and road traffic regulations
- Information and instructions in this operating manual
- Operation, maintenance and repair instructions

# Familiarising yourself with the machine

This chapter contains general information on your machine as well as information on:

- Range of application
- Features
- Designation of components
- Technical specifications

## Range of application of the machine

The machine may only be used for its intended agricultural or associated purpose, depending on the type of tool with which it is equipped.

Tool	Purpose
Hammer flail	To cut grass, other growth or sections up to a maximum of 5 cm diameter

Since the conditions of use are very varied, the user must pay particular attention to the machine's performance limits. The machine must be switched off immediately if there is any indication of overstress.

## Proper use

The machine should only be used for the designated work as described in this operating manual. Any application other than or beyond this is considered improper use.

Examples of improper use:

- Transporting persons or objects
- Cutting of any products other than those specified or those of a similar nature

→ »Range of application of the machine«

- Transferring power to other objects
- front attachment
- Working depths under 11
- Any type of ground work
- Use of the machine in a position in which the tools do not point towards the ground, for example in a vertical position

The manufacturer and dealers are not liable for damage caused by improper use. The risk is borne solely by the user.

# Familiarising yourself with the machine

## Features of the machine

### **Robust housing in optimised form**

The housing is particularly robust for heavy use and is designed in an optimised form.

### **Power transmission**

Power is transmitted to a gear box via a PTO shaft. From there, the rotor is driven via V-belt.

### **Internal rotor storage**

Internal rotor storage prevents accumulation of dirt and minimises wear.

### **Tools**


The tools are manufactured using high-quality material. Optimal shredding is achieved in conjunction with the short chopping bars.

### **Safety**

The machine is constructed in accordance with EU regulations, for maximum possible safety of operation. The machine bears the CE mark and the UKCA mark.


# Familiarising yourself with the machine

## Designation of components

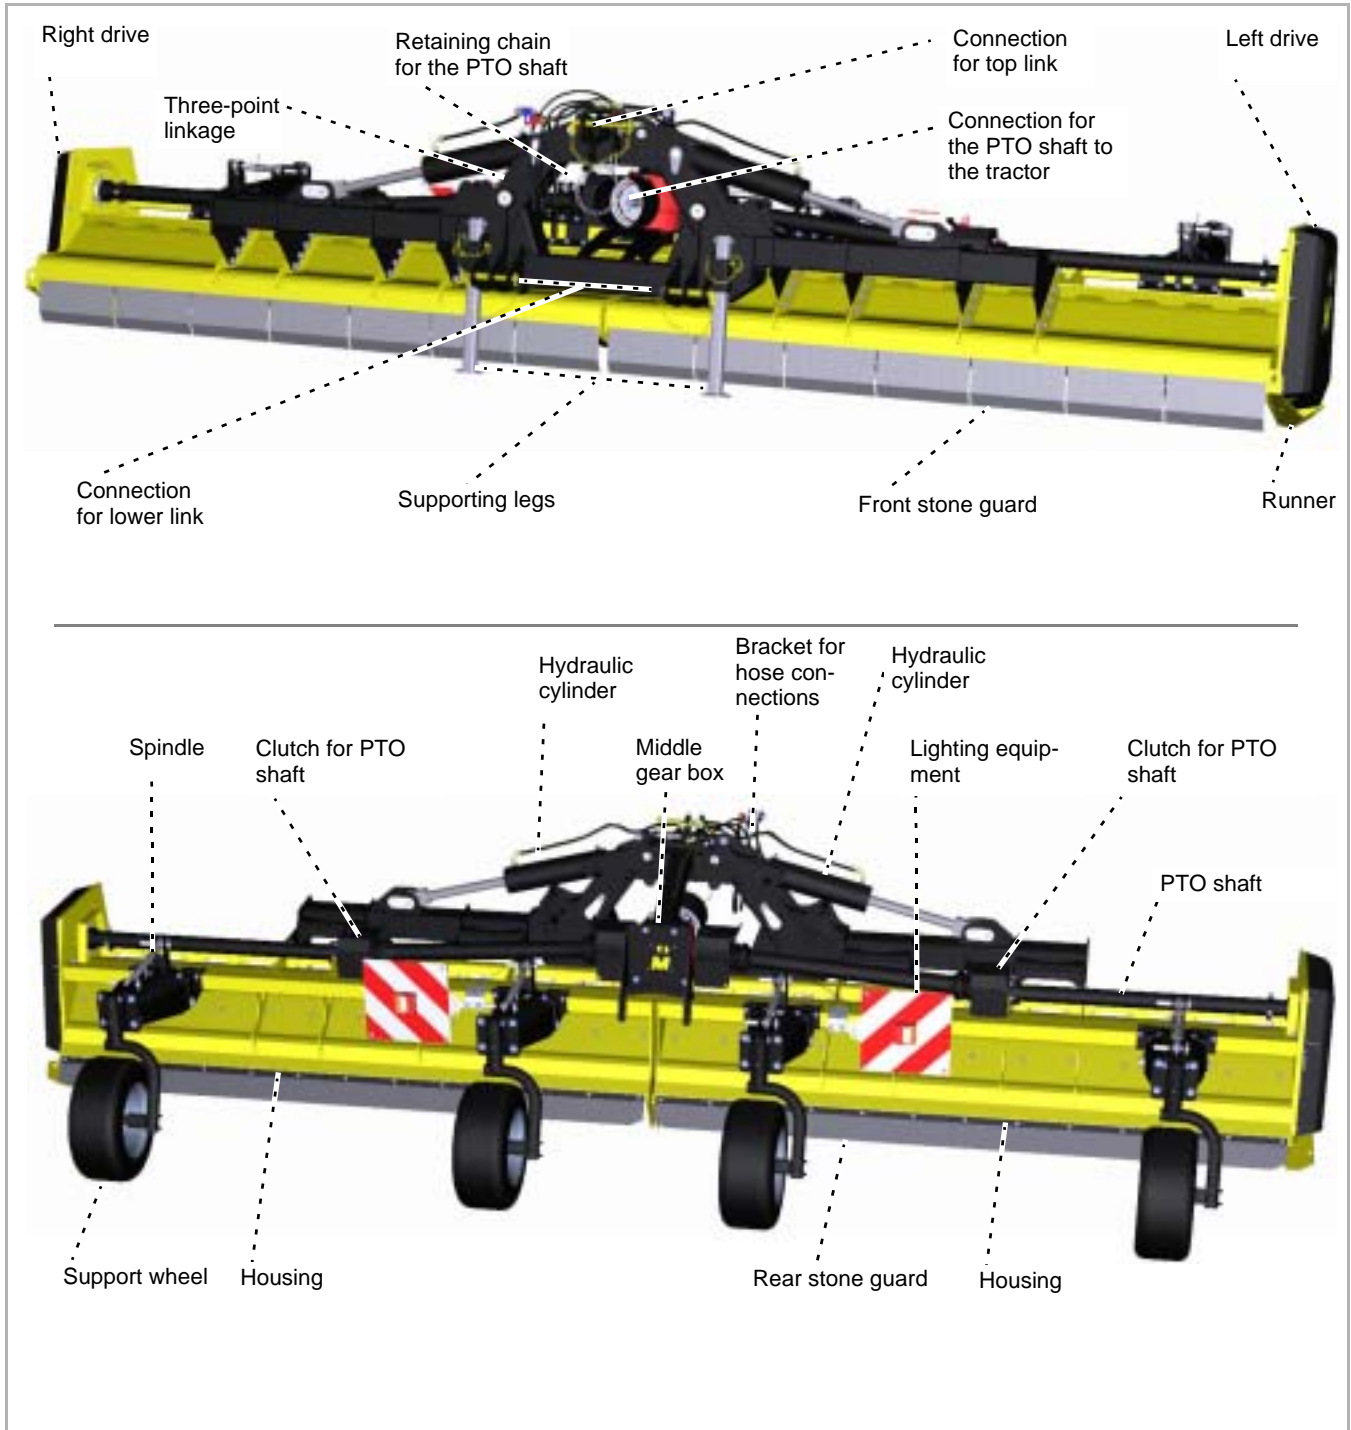

# Familiarising yourself with the machine

## Technical specifications

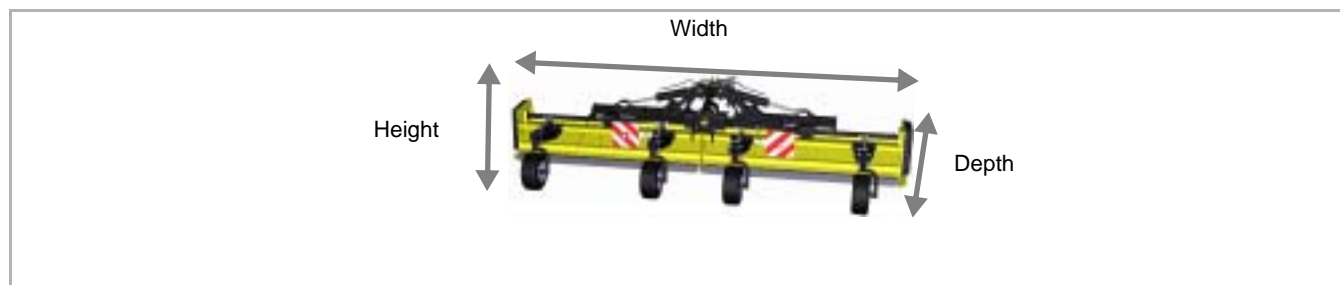

		MU-M/F Vario
<b>Height [m]</b>		
In work position		1.30
In transport position		3.25
<b>Width [m]</b>		
In work position		6.35
In transport position		2.50
<b>Depth [m]</b>		
In work position		2,35
In transport position		2,35
<b>Working width [m]</b>		
In work position		6.00
<b>Total weight [kg]</b>		
Depending on equipment level, approx.		2930
<b>Centre of gravity (dimension G)</b>		
Depending on equipment level, approx.		730
<b>Rotational speed of rotor [rpm]</b>		
PTO stub shaft 1000 rpm		2490
<b>Power requirement [kW]</b>		
Minimum		140
Maximum permitted		250
<b>Tractor weight [kg]</b>		
Minimum		6000
<b>Working depth [mm]</b>		
Adjustable		11-285
<b>Number of tools</b>		
M-hammer flail		52
<b>Lubricants</b>		
Transmission oil		SAE 90 EP
hydraulic oil		SAE 90 EP
<b>Noise emission [dB(A)]</b>		
In the workplace		70



# Familiarising yourself with the machine

		MU-M/F Vario
<b>Category</b>		
Lower link category		II and III
<b>Paint colors</b>		
Yellow		RAL 1007
Black		RAL 9005
<b>PTO shaft</b>		
Model		GE2502

# Delivery and assembly

## Checking the scope of delivery

The machine is delivered completely assembled. If parts of the machine have not been assembled, please contact your dealer.



### **Do not assemble the machine yourself**

Do not perform assembly work yourself since requirements for an orderly condition of the machine are :

- Observance of a sequence of worksteps
- Compliance with tolerances and torques

*Incorrect assembly may result in damage to the machine or poor performance.*



If parts are missing or have been damaged during transportation, please submit a claim immediately to your dealer, importer or the manufacturer.



## Increased risk of injury

When the machine is being coupled to the tractor, there is an increased risk of injury. Therefore:

- Secure the tractor against rolling away
- The tractor and machine must belong to the same category
- Never stand between the tractor and the machine during coupling
- Actuate the three-point power lift system slowly and carefully

*Failure to observe these instructions can result in serious or fatal injury.*




## Only attach the machine to the rear

The machine may only be attached to the rear of the tractor.  
*The machine could be damaged if front-mounted*

The machine can be set down in the work position or in the transport position.

## Work position


### Coupling the tractor

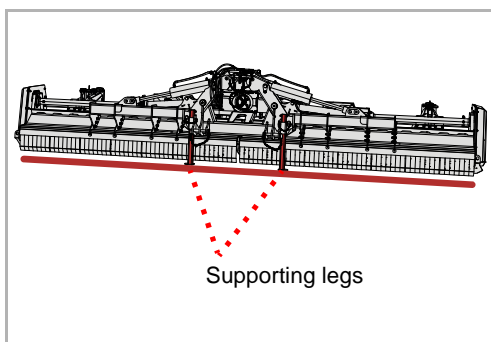

- ▶ Check whether the machine was securely positioned. The front supporting legs have been lowered and the housing of the folded-out machine is on the ground.
- Chapter »Parking and storage« paragraph »Setting down the machine in a secure position«, page 42



If the machine is not securely positioned:

- ▶ Secure the machine with suitable lifting gear and move into the correct position

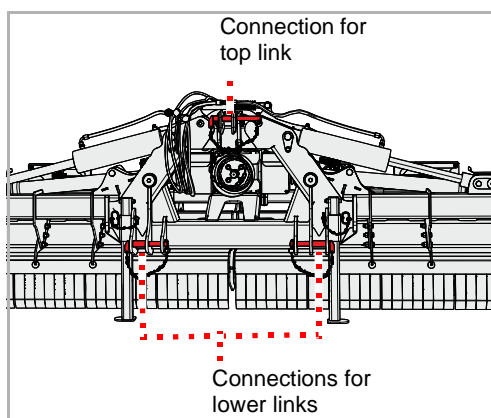

- ▶ Adjust both lower links on the tractor to the same height
- ▶ Connect lower link according to the category of tractor and secure with pin and linchpin
- ▶ Connect top link according to the category of the tractor and secure with pin and linchpin


# Coupling the machine

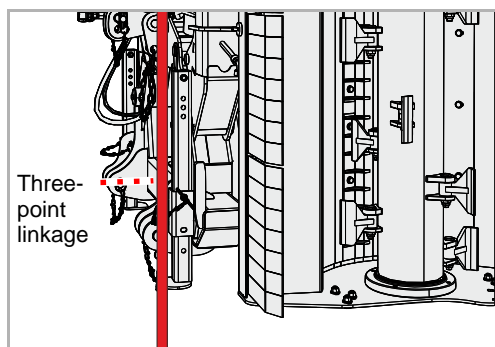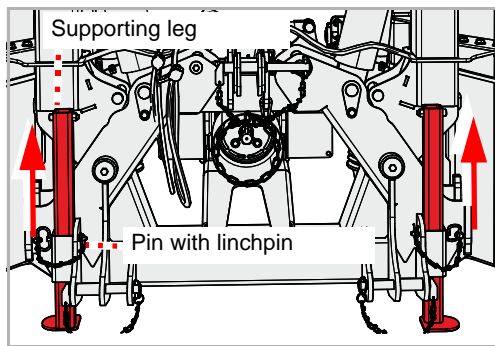

- ▶ Raise the machine slightly
  - ▶ Undo the pin and remove the pin on the supporting leg
  - ▶ Pull the supporting leg upwards and lock in place in upper position with the pin
  - ▶ Secure the pin
  - ▶ Push the second supporting leg upwards
  - ▶ Adjust the lower link so that the machine has little play to the left or right
- 
- ▶ Adjust the top link so that the three-point stand is vertical

## Transport position

### Coupling the tractor

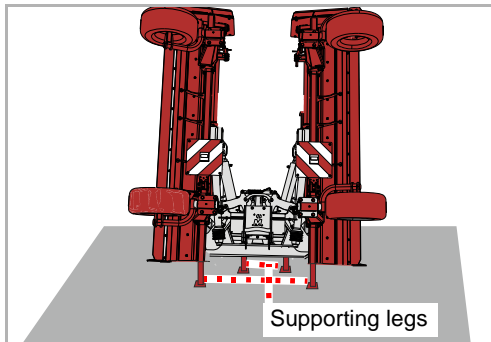


- ▶ Check whether the machine was securely positioned. The front and rear supporting legs have been lowered and the machine is standing securely on a firm surface.


→ Chapter »Parking and storage« paragraph »Setting down the machine in a secure position«, page 42

If the machine is not securely positioned:

- ▶ Secure the machine with suitable lifting gear and move into the correct position

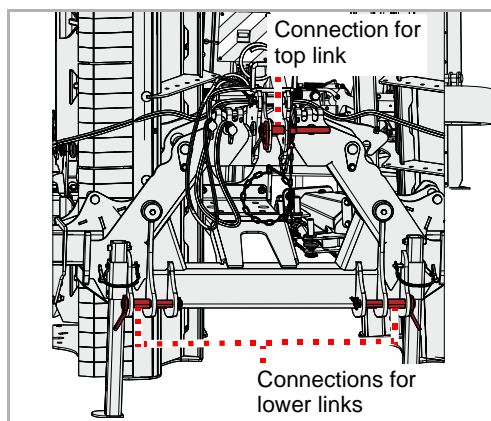

- ▶ Adjust both lower links on the tractor to the same height
- ▶ Connect lower link according to the category of tractor and secure with pin and linchpin
- ▶ Connect top link according to the category of the tractor and secure with pin and linchpin

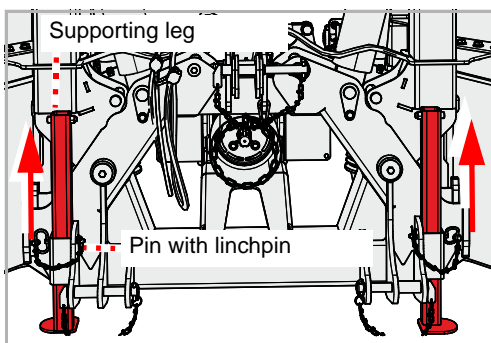

- ▶ Raise the machine slightly
- ▶ Undo the pin and remove the pin on the supporting leg
- ▶ Pull the supporting leg upwards and lock in place in upper position with the pin
- ▶ Secure the pin
- ▶ Push the second supporting leg upwards

# Coupling the machine




## Move the supporting legs into the top position

Move the front and rear supporting legs into the top position.

*Supporting legs in the bottom position will damage the machine when folding out.*

- ▶ Also move rear supporting legs upwards
- ▶ Adjust the lower link so that the machine has little play to the left or right
- ▶ Adjust the top link so that the three-point stand is vertical

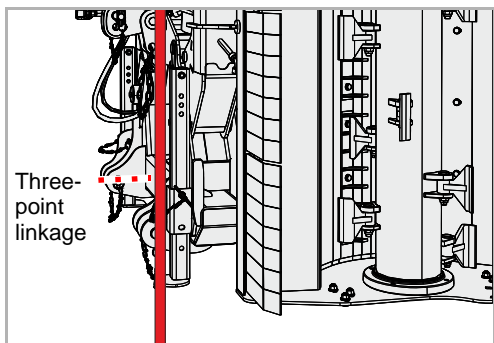


## PTO shaft

The PTO shaft has been adjusted to fit your tractor by your dealer.

## Connection to the machine

Generally, the PTO shaft is already connected to the machine. If the PTO shaft is replaced or after maintenance work to the PTO shaft, it will be necessary to connect it to the machine.

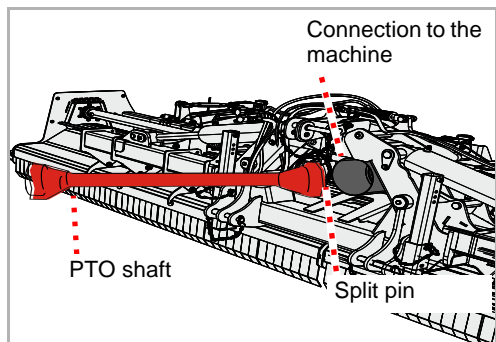

- ▶ Carefully clean and grease the PTO shaft and connection to the machine
- ▶ Push the PTO shaft onto the connection to the machine and ensure that the cotter pin locks into place on the PTO shaft

# Coupling the machine


## Connection to the tractor



If the tractor is changed, the correct length of the PTO shaft must be checked. It is particularly important when checking the PTO shaft to ensure that the two halves of the PTO shaft continue to overlap at the position in which the PTO shaft is pulled apart furthest.

When changing the tractor, check that the PTO shaft is suitable for this tractor and if necessary, replace the PTO shaft and have it adjusted at a qualified specialist workshop.

- ▶ Hold the PTO shaft and open the retaining chain
- ▶ Move the PTO shaft to one side and close the retaining chain again

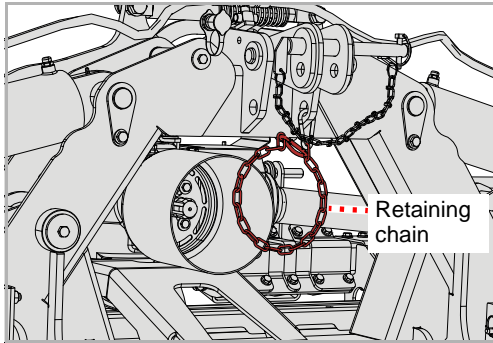


### **Do not lay the attached PTO shaft in the retaining chain**

The attached PTO shaft must not lay on the retaining chain.

*A PTO shaft laying on the retaining chain will be damaged during road transport or when operating the lower link.*

- ▶ Connect the PTO shaft to the PTO stub shaft of the tractor and ensure that the cotter pin is locked in place on the PTO shaft
- ▶ Put the retaining chain back in place. The PTO shaft must not now be laying on the retaining chain.

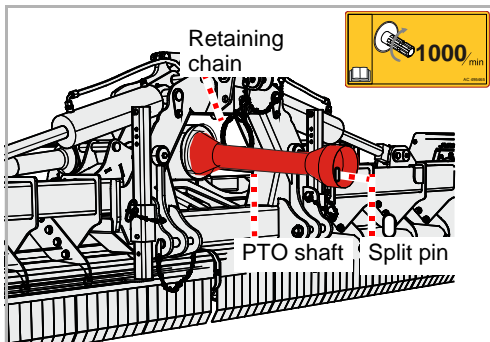


# Coupling the machine

## Hydraulics

The following functions can be controlled:

Function	Color of dust cap
Open transport locking device	Blue
Folding the machine into the work position or the transport position	Red

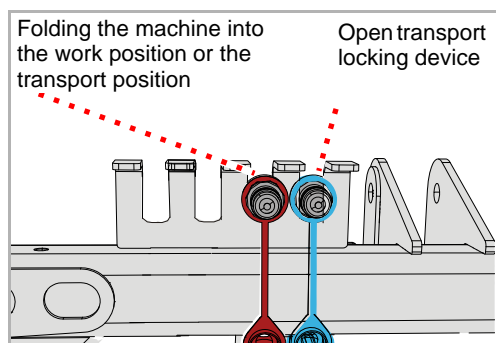

- ▶ Connecting the hydraulic hoses to one single-acting control valve each

## Electrics

If present, attach the following plugs to the tractor for:

- The lighting equipment on the machine
- ▶ Check that the lighting equipment is working correctly

For indicators which are not signalling and are equipped with LEDs:



Depending on the tractor, the tractor's electrics may require regrouping in the electrical cable's plug connection. Please contact your dealer in this case.



## Working width

The working depth can be infinitely adjusted.



### **Tools must not come into contact with the ground**

Any contact with the ground could result in stones or other material not being held back safely by the stone guard.

*Persons even outside of the hazard area could be injured by ejected material.*




### **Do not go below the minimum working depth**

The working depth must not be below the lowest setting.

*Working depths below the lowest setting may result in the machine being damaged by excessive wear.*

The machine is carried by support wheels. The position of the working wheels determines the working depth. The setting must be the same on all of the machine's support wheels.

- ▶ Folding the machine into its work position  
→ Chapter »Mulching«, Section , Page 37
- ▶ Lowering the machine
- ▶ Loosening the retainer on the spindle
- ▶ Use the spindle to adjust the working depth as desired. A scale has been fitted to help you. We recommend setting the spindle to level 2 or level 3 to start with. This can be adjusted later on the field.
- ▶ Secure the spindle again
- ▶ Make identical adjustments to all support wheels

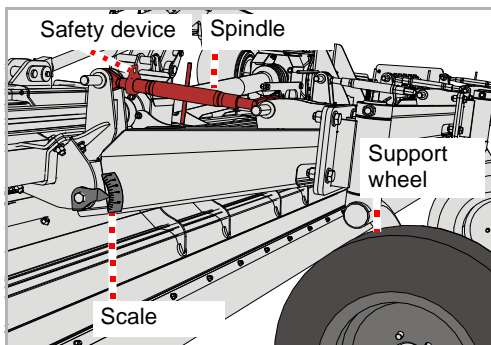

# Preparation

## Cutting bar [+]

You can alter the degree of shredding using a cutting bar.



### **Check for contact between tools and the cutting bar**


The tools must not be touching the cutting bar.

*If any tools are touching the cutting bar, this will damage the tools in question and the cutting bar itself.*

## Adjusting

After adjusting the cutting bar you must check whether any tools are touching the cutting bar.

- ▶ Raise the machine and mechanically secure it against lowering
- ▶ Loosen the screws but do not remove them
- ▶ Move the cutting bar as required
- ▶ Retighten the bolts

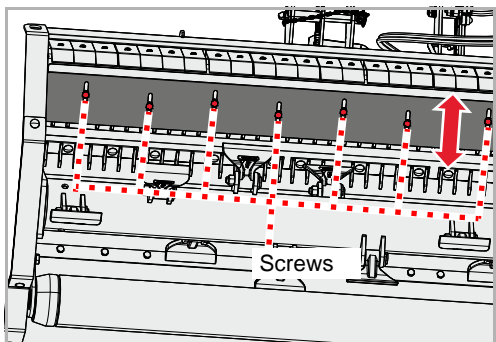


## Checking

Check whether any of the tools are touching the cutting bar.

- ▶ Turn the rotor by hand until one tool is next to the cutting bar
- ▶ Move the tool next to the cutting bar back and forth


### **If the tool touches the cutting bar:**

- ▶ Move the cutting bar away from the tools
- ▶ Continue turning the rotor by hand and check the rest of the tools along the entire length of the cutting bar.

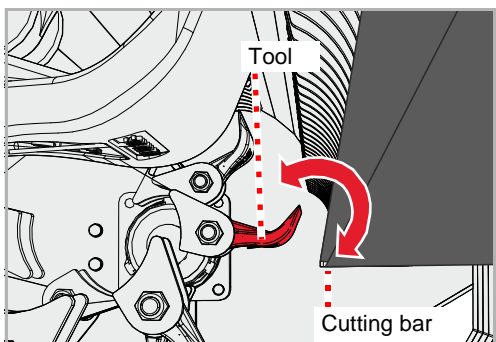

For transporting the machine, it must be folded into the transport position after being coupled.

- ▶ Using the tractor's control device, fold the machine into the transport position. Make sure that the transport locking device locks into place.

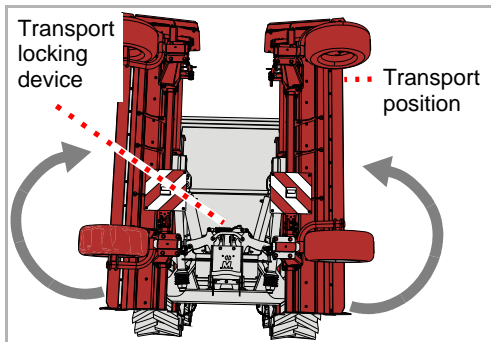


### Securing the control devices

Prior to road transport, the control devices on the tractor must be secured against inadvertent actuation.

*If the control devices are unsecured on the tractor, the machine could accidentally fold out into the work position during road transport. This can result in accidents.*

- ▶ Position the lower link over the three-point power lift of the tractor at a height which will enable the machine to be high enough for transport

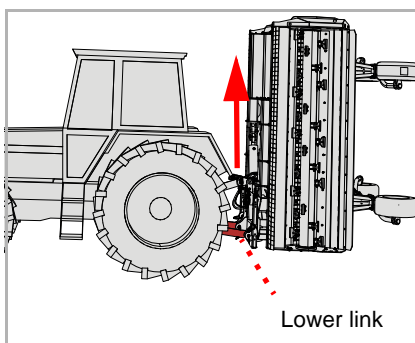


### Never switch on the PTO stub shaft in transport position

The PTO stub shaft must not be switched on in transport position. *A rotating PTO shaft will be seriously damaged in transport position.*

## Pin


The pin secures the machine for road transport.

- ▶ Reposition pin in transport position

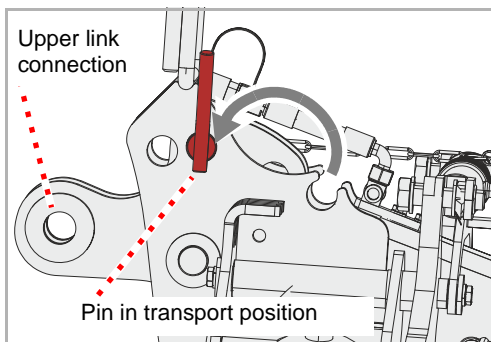

# Driving on the road

## Warning signs [+]

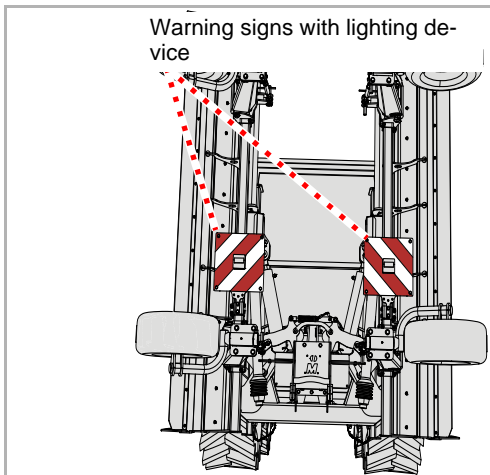


- ▶ Check lighting device for correct function

## Transport without coupling

For transport on, for example, a trailer, the machine can be raised. Only use the designated points for attaching the lifting device. The machine must be securely positioned.


- ▶ Setting down the machine in a secure position

→ Chapter »Parking and storage« paragraph »Setting down the machine in a secure position«, page 42

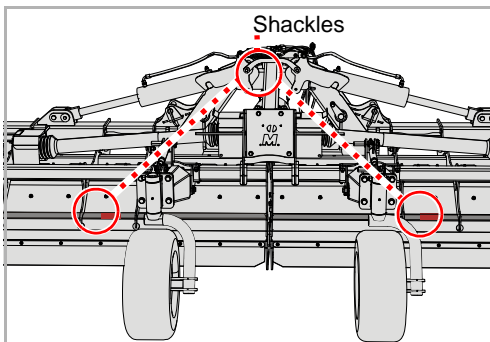

- ▶ Attach suitable lifting devices to the shackles and on the connection for the top link
- ▶ Raise the machine with suitable lifting gear and position on the loading bed
- ▶ Secure the machine against slipping


## Work position

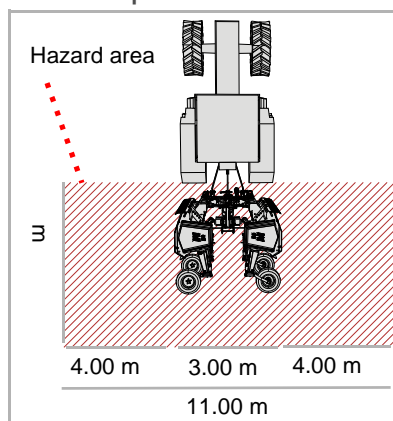

### Check the hazard area


Before folding out the machine into the work position, check the hazard area. Make sure that you have an adequate view. Do not begin to fold it out into the work position until the hazard area is cleared of any persons or objects.

*Folding out the machine without first checking the hazard area can lead to serious or fatal accidents.*

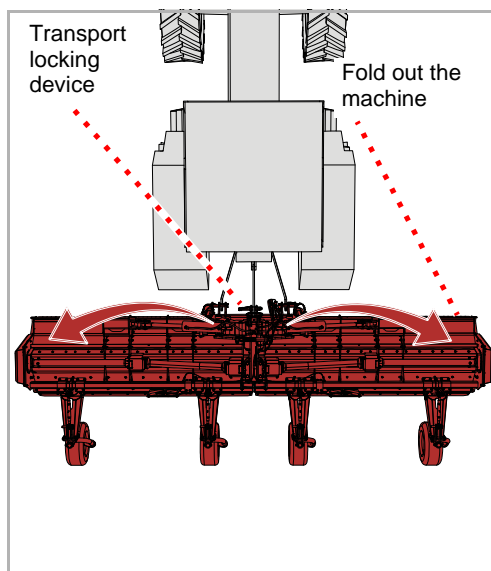

- ▶ Open the transport locking device using the control device on the tractor
- ▶ Using the tractor's control device, fold out the machine into the work position


## Pin

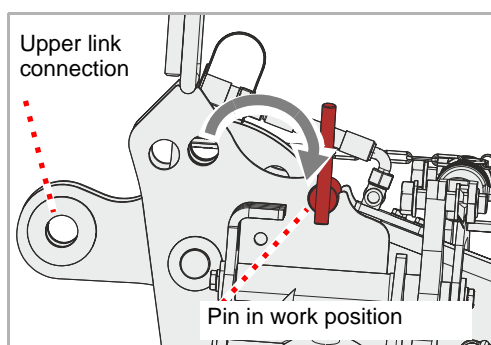

The pin secures the machine for road transport. For mulching, you must move the pin to the work position.

- ▶ Reposition pin in work position

## Task

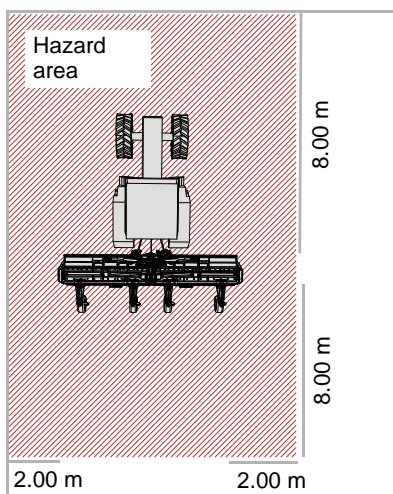

### Check the hazard area

The hazard area in front of and behind the machine is 8 m, to the sides 2 m each. Before driving off, operating the machine and during operation, check its hazard area. Make sure that you have an adequate view. Do not begin work until the hazard area is cleared of any persons or objects.

Parts could be ejected from the machine at high speed in certain circumstances. The hazard area, particularly in front of and behind the machine, must be cleared of any persons, animals or objects before starting.

*Any use of the machine without verification of the hazard area can lead to serious or fatal accidents.*

### Assess the dust exposure levels

If the ground and the material to be mulched are dry, you may be exposed to dust. Dust exposure can be avoided by taking into account the direction of the wind. If dust exposure cannot be avoided, you can protect yourself by wearing a dust mask. If these measures are not sufficient, use a tractor with an enclosed cab and a dust filter.

*Dust exposure may lead to respiratory diseases.*




### Only work forwards

The machine may only be in the work position when moving forwards. The machine must be raised up when reversing.

*A machine in work position when reversing could result in serious damage to the machine.*

Particular care should be taken by the operator when working with the mulcher. Working on ditches, overhangs or slopes are activities which tend to be particularly hazardous. We can only give general instructions, the actual situation must be evaluated by the operator.

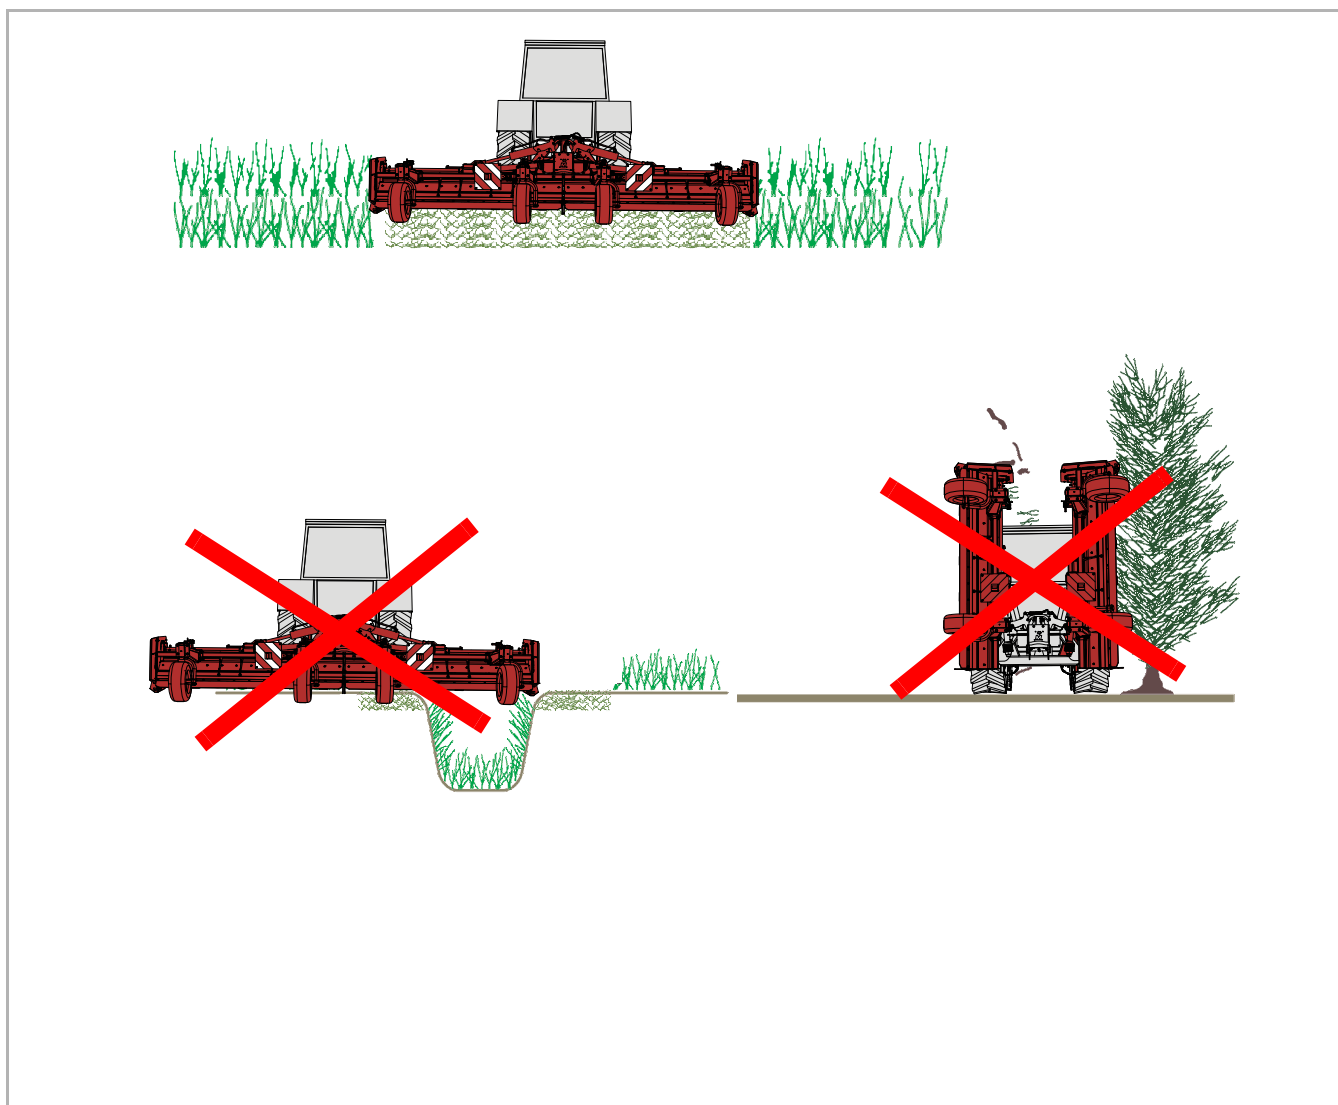


# Mulching



## Do not lean the machine forwards


The machine must not lean forwards when operating. A machine that is leaning forwards could block and operate incorrectly.

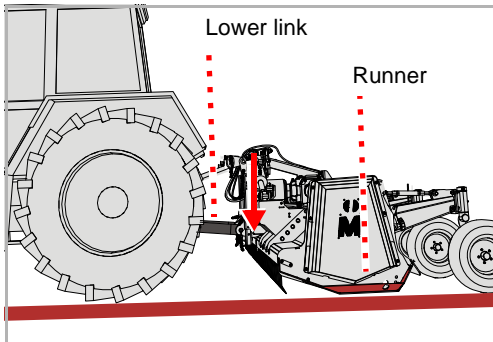


- ▶ Lower the machine using the lower links on the tractor until the machine is guided using the support wheels. Adjust the lower link so that the runners on both sides of the machine run parallel to the ground.



You can determine the working depth using the lower link. Using the support wheels to adjust the working depth is only necessary when it needs to be changed considerably.

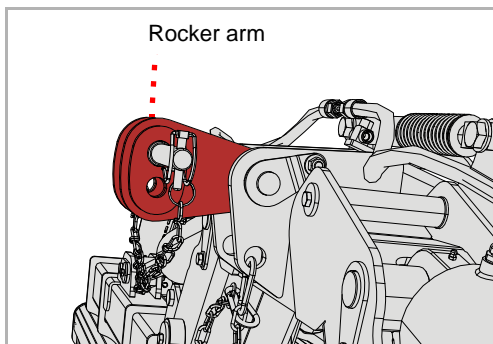

- ▶ Adjust the top link so that it does not exert any pressure on the linkage and the linkage can work freely

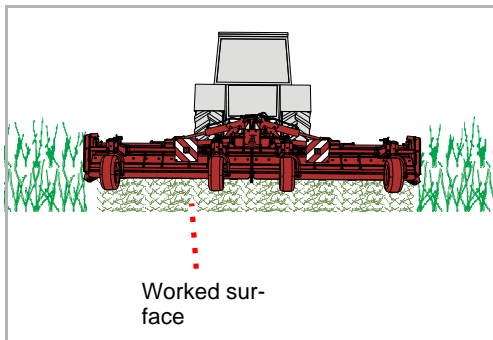

- ▶ Switch the PTO stub shaft into the work position and slowly bring the machine to the rated speed
- ▶ Then drive at low speed into the stock, increase speed slowly. Pay attention to the machine while doing this.

## If the machine is working too hard:

- ▶ Reduce speed

- ▶ Drive at a suitable speed. The speed must be appropriate to the growth and the type of terrain.

## If the outer ends of the machine touch the ground when rounding tight corners:

- ▶ Use the spindles to increase the working depth of the outer support wheels until the ends of the machine no longer touch the ground when rounding tight corners



## Cleaning

A high-pressure cleaner, for example, can be used to clean the machine. Never point the water jet directly at the labels or type plate.



**Only use low pressure to clean the bearings**

Only use low pressure to clean the bearings.

*Water penetration reduces the service life of the bearings*

## Care

To ensure the machine's long service life, we recommend applying a protective coating of oil after the end of the season and during storage.



Use only approved and biodegradable oil, e.g. rapeseed oil.

# Parking and storage

## Setting down the machine in a secure position

You can set the machine down in the work position or in the transport position.



### Ensure that there are no unauthorised persons can enter the set-down location

If the machine is set down coupled or uncoupled on the tractor, the set-down location must be selected to ensure that no unauthorised persons can enter.

*Persons could be injured by coming into contact with parts of the machine or by manipulating the machine.*



### Select the set-down location carefully

The set-down location must be relatively even and the ground must be solid.

*Uneven or soft ground could result in the machine rolling away and becoming damaged.*


Requirements on the set-down location:

- Horizontal, solid surface
- Sufficient room on all sides
- Protected against access by unauthorised persons, such as children

## Work position

The machine is prepared for setting down safely in several stages:

1. Fold out the machine into its work position
2. Disconnect electrical cables and hydraulic hoses from the tractor
3. Remove PTO shaft
4. Lower supporting legs
5. Remove top link, undo lower link

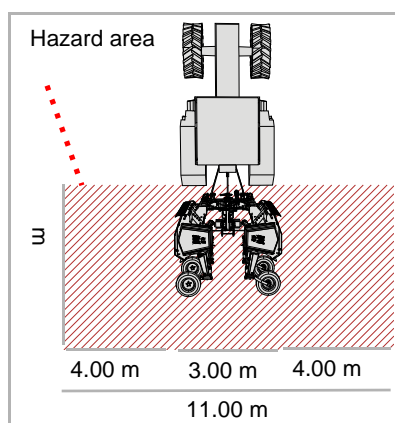


### Check the hazard area

Before folding out the machine into the work position, check the hazard area. Make sure that you have an adequate view. Do not begin to fold it out into the work position until the hazard area is cleared of any persons or objects.

*Folding out the machine without first checking the hazard area can lead to serious or fatal accidents.*

## 1. Folding out

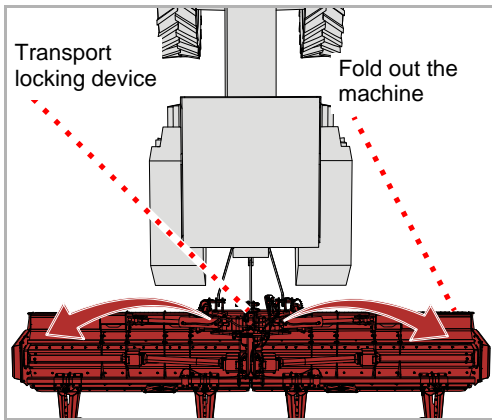

- ▶ Open the transport locking device using the control device on the tractor
- ▶ Using the tractor's control device, fold out the machine into the work position

## 2. Electrics and hydraulics




### Increased risk of injury

There is an increased risk of injury when uncoupling the machine from the tractor. Therefore:

- Secure the tractor against rolling away
- Never stand between the tractor and the machine during uncoupling
- Actuate the three-point power lift system slowly and carefully


*Failure to observe these instructions can result in serious or fatal injury.*

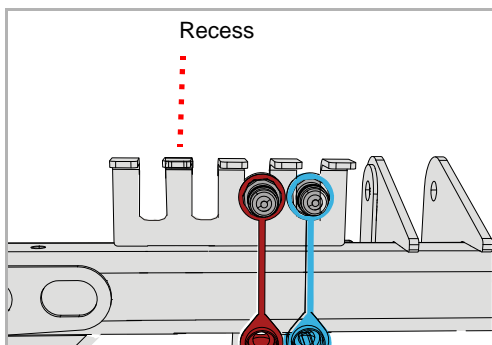

- ▶ Disconnect electrical cables and hydraulic hoses from the tractor's connections
- ▶ Place plug connection on the recess


# Parking and storage

## 3. PTO shaft

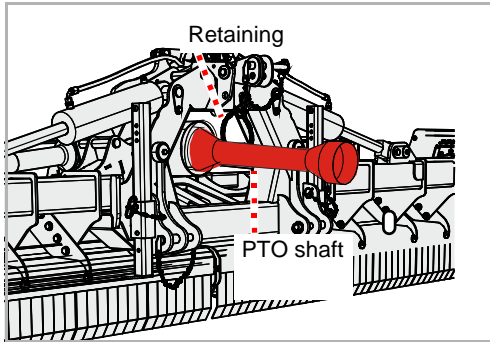

- ▶ Disconnect the PTO shaft from the tractor
- ▶ Open the retaining chain
- ▶ Lay the PTO shaft into the retaining chain and close the retaining chain again

## 4. Supporting legs

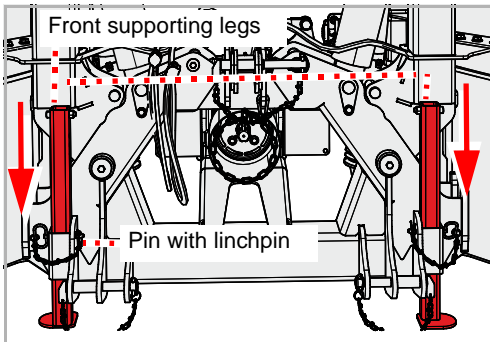

- ▶ Undo the pin and remove the pin on the supporting leg
- ▶ Lower the front supporting leg and secure with the pin
- ▶ Secure the pin
- ▶ Lower the second front supporting leg
- ▶ Lower the lower link until the top link is no longer under compressive or tensile strain

## 5. Top link, lower link

- ▶ Remove the top link
- ▶ Undo the lower link and lower


The machine is now safely set down

## Transport position

The machine is prepared for setting down safely in several stages:

1. Fold the machine into the transport position
2. Disconnect electrical cables and hydraulic hoses from the tractor
3. Remove PTO shaft
4. Lower supporting legs
5. Remove top link, undo lower link

### 1. Folding in

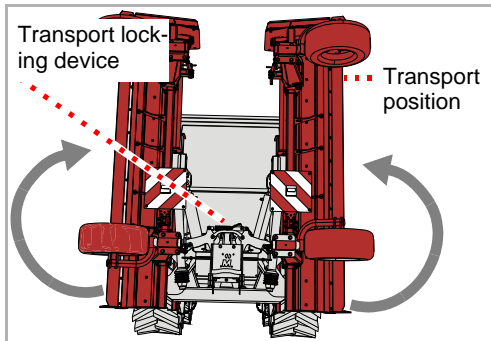

- ▶ Using the tractor's control device, fold the machine into the transport position. Make sure that the transport locking device locks into place.

### 2. Electrics and hydraulics




#### Increased risk of injury

There is an increased risk of injury when uncoupling the machine from the tractor. Therefore:

- Secure the tractor against rolling away
- Never stand between the tractor and the machine during uncoupling
- Actuate the three-point power lift system slowly and carefully


*Failure to observe these instructions can result in serious or fatal injury.*

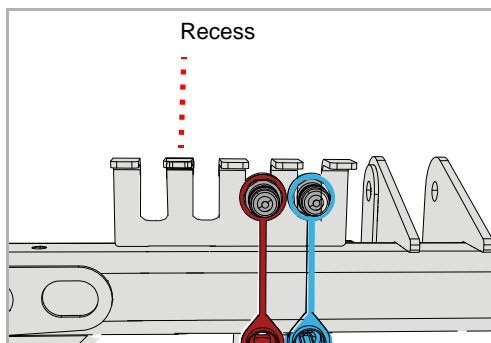

- ▶ Disconnect electrical cables and hydraulic hoses from the tractor's connections
- ▶ Place plug connection on the recess


# Parking and storage

## 3. PTO shaft

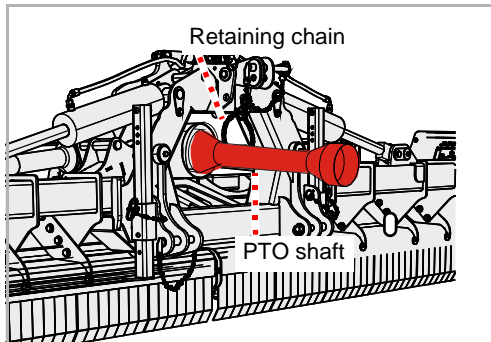


- ▶ Disconnect the PTO shaft from the tractor
- ▶ Open the retaining chain
- ▶ Lay the PTO shaft into the retaining chain and close the retaining chain again

## 4. Supporting legs

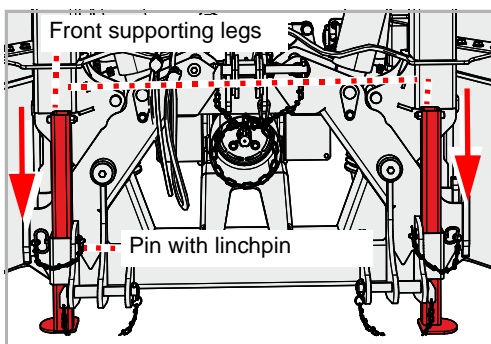

- ▶ Undo the pin and remove the pin on the supporting leg
- ▶ Lower the front supporting leg and secure with the pin
- ▶ Secure the pin
- ▶ Lower the second front supporting leg

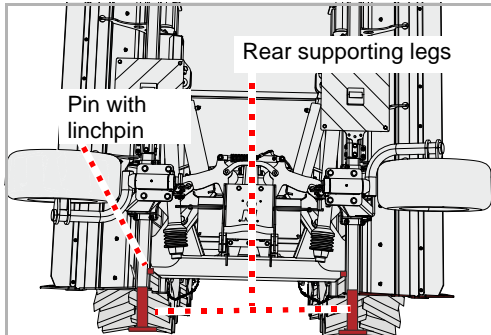

- ▶ Lower the rear supporting leg and secure with the pin
- ▶ Secure the pin
- ▶ Lower the second rear supporting leg
  
- ▶ Lower the lower link until the top link is no longer under compressive or tensile strain

## 5. Top link, lower link

- ▶ Remove the top link
  - ▶ Undo the lower link and lower
- The machine is now safely set down

## Storing the machine

After cleaning, the machine should be stored in transport position in a dry location and on a level and stable surface.

→ Section »Setting down the machine in a secure position«, Page 42



Apply a protective coating of oil during storage. Use only approved and biodegradable oil, e.g. rapeseed oil.

→ Chapter »Cleaning and care«, starting at page 41

## For your safety

### Special safety instructions



#### **Requirements for conducting maintenance work**

Only perform the maintenance work if you have the required expert knowledge and suitable tools.

*A lack of specialist knowledge or the use of unsuitable tools can cause accidents.*

#### **Protect the machine from being started up accidentally**

If the machine is coupled, only carry out repair and maintenance work and only rectify malfunctions on it if:

- The PTO stub shaft is off
- The engine is switched off
- The ignition key is removed

*Serious accidents may be caused if the machine starts accidentally.*



#### **Welding work**

Welding work may only be carried out by persons trained in welding who also have specialist knowledge of repairing agricultural machinery. Welding work which negatively impacts the machine's construction is prohibited.

*Incorrect welding work could impair or destroy the machine's function. If in doubt, contact your dealer before carrying out any welding work.*

#### **Use replacement parts with identical properties**

Many components have special properties that are essential for the stability and correct operation of the machine.

When replacing components, dimensions, stability and material quality must be guaranteed. We recommend the exclusive use of original replacement parts.

*Use of replacement parts which do not correspond to requirements could cause damage to the machine or impaired performance.*



## Protective measures when handling oils or lubricants

Additives in oils and lubricants may have adverse effects on health. Since the hazardous material code does not require any special identification, please always observe the following:



### **Avoid skin contact**

Avoid skin contact with these materials.  
*Contact can result in skin damage.*

### **Protect your skin**

When handling oils and lubricants, protect your skin with lotion or wear oil-resistant gloves.  
*Oils can be hazardous to your health.*

### **Do not use oils for cleaning**

Do not use oils or lubricants to clean your hands.  
*Swarf and abraded material in these materials can also result in injuries.*

### **Change out of soiled clothing**

Change out of clothing that is heavily soiled with oil as soon as possible.  
*Oils can be hazardous to your health.*



- Collect old oil and dispose of it in accordance with statutory regulations.
- If your skin becomes irritated by oil or lubricants, contact a doctor immediately.

## General information

This information relates to general maintenance work. For all maintenance work, the machine must be locked in the work position. If it is necessary to put the machine in its transport position for maintenance work, you will see an appropriate reference in the maintenance instructions.



### **Working with the grease gun:**

One or two strokes with the grease gun are sufficient for lubrication. If you feel resistance during the second stroke of the grease gun, do not complete it.

Too much grease will force the bearings apart. This could allow dust and dirt to enter the bearing, resulting in premature wear.

# Maintenance

## Fundamentals

The following table contains a brief explanation of the most important terms used for maintenance.

Task	Version
Greasing	<ul style="list-style-type: none"><li>• Apply grease to the slide surfaces using a brush</li></ul>
Lubrication	<ul style="list-style-type: none"><li>• 1 - 2 Unless specified otherwise, one or two strokes with the grease gun provide sufficient lubrication</li></ul>
Oiling	<ul style="list-style-type: none"><li>• Unless otherwise specified, use only vegetable-based oil such as rapeseed oil</li><li>• Mineral oils are not suitable</li><li>• The use of used oil will endanger your health and is also strictly prohibited</li></ul>
Replacement	<ul style="list-style-type: none"><li>• Replace the component in question according to the instructions in the »Maintenance« chapter</li></ul>
Check	<ul style="list-style-type: none"><li>• An inspection may be required in conjunction with the replacement of the component in question</li></ul>
Observe the maintenance intervals	<ul style="list-style-type: none"><li>• All information is based on average machine usage</li><li>• In the case of heavy usage (e.g. contract work), shorten the maintenance intervals accordingly</li><li>• Shorter maintenance intervals may also be required under extreme working conditions (e.g. heavy dust generation)</li></ul>

## Screwed connections

### Retighten screws

All bolts must be retightened:

- After the first hours of operation
- According to the frequency of use
- But at least once a season

### General tightening torques

Tighten all screwed connections in accordance with the information in the table. If different tightening torques are necessary, they are specified in the chapter »Maintenance«. The minimum quality of the bolts is 8.8.

Bolt size	Quality of the bolts		
	„8.8“	„10.9“	„12.9“
	<b>Tightening torques in Nm</b>		
M6	9.9	14	17
M8	24	34	41
M10	48	68	81
M12	85	120	145
M16	210	290	350
M20	425	610	710
M24	730	1050	1220

# Maintenance

## Maintenance intervals and setting work

The information relates to average usage under the machine's normal operating conditions. Maintenance intervals are shorter for heavy usage, such as with hire companies, or for extreme operating conditions such as very dusty environments.

	After the first hours of operation	Once daily	After 30 hours of operation	After 75 hours of operation	Once per season	As required	In case of wear	grease / oil / lubricate	Check	Replacement	Cleaning
<b>General</b>											
Retighten all screws	•					•					
Visual inspection	•	•									
Bearing		•				•		•			
Pivots		•							•		
<b>Hydraulics</b>											
Hydraulic hoses Every 6 years										•	
Hydraulic hoses General						•	•			•	
Hydraulic cylinder				•		•		•	•		
<b>Tools</b>											
Fastenings on the rotor		•							•		
Condition, wear		•							•		•
<b>Other</b>											
Position of rotor		•						•			
Shafts and pins			•					•			
PTO shaft Protective cover		•				•		•	•	•	•
Transmission oil		•			•				•	•	

## Lubricating work

### Lubricate bearings


The bearings must be lubricated regularly. Lubricate only with one or two strokes from the grease gun:

- According to the maintenance chart
- After heavy use
- But at least once a season

Bearings that require no maintenance must not be lubricated.

# Maintenance

## Overview of lubrication points

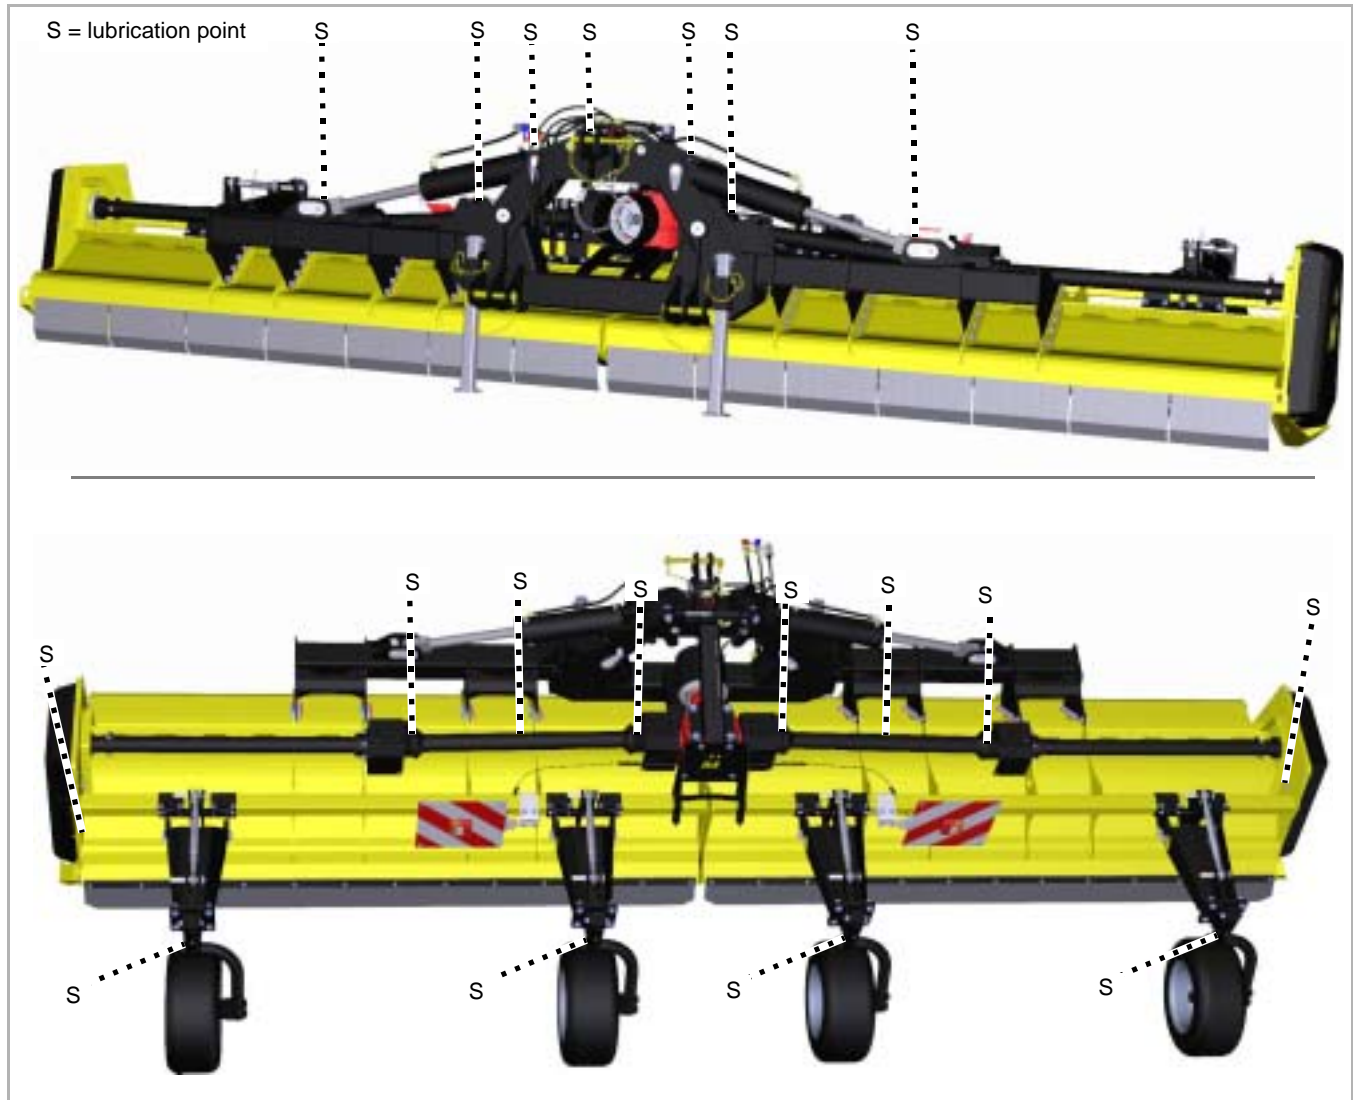

## Other lubrication points

The following applies:

- In addition to the lubrication points shown in this operating manual, your machine may have other lubrication points
- As a rule, lubrication points are located at pivots or bearings. Therefore, inspect your entire machine for any such additional lubrication points.



The location of the lubricating nipple is usually shown on one component as an example. If multiple components of this kind exist, the lubricating nipples have to be lubricated at each of these components.

## PTO shaft


The PTO shafts are heavily stressed. This means that regular maintenance is decisive for the PTO shafts' service life. Only the most important work is shown here.

Full maintenance work on the PTO shaft:

→ PTO shaft operating manual

## Checking

### Daily

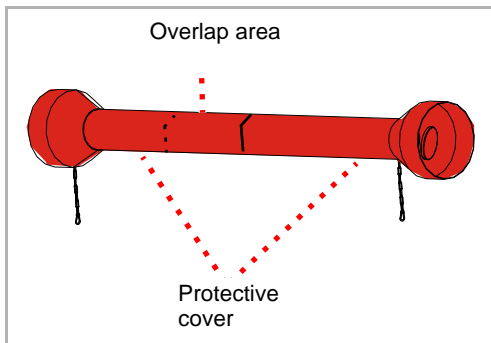

- ▶ Check the PTO shaft for contamination and clean if required. Dust in conjunction with oil and grease results in increased wear


### If the PTO shaft is heavily contaminated:

- ▶ Clean PTO shaft
  - ▶ Grease the interior of the overlap area of the protective cover
- PTO shaft operating manual

- ▶ Check protective cover for damage

### If the protective cover is damaged:

- ▶ Replace protective cover
- PTO shaft operating manual

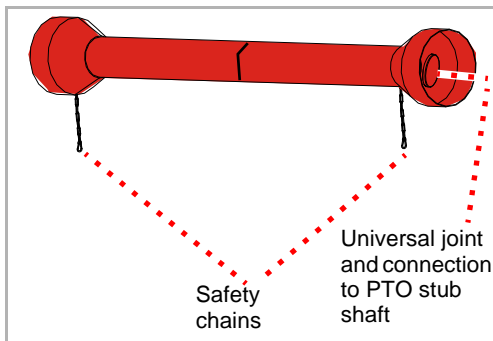

- ▶ Check presence and correct function of safety chains

### If the safety chains are not present or are heavily worn:

- ▶ Replace the safety chains
- PTO shaft operating manual


- ▶ Check the PTO shaft for wear in the universal joints and at the connection to the PTO stub shaft

### If the universal joints are heavily worn:

- ▶ Replace the universal joints
- PTO shaft operating manual

## Lubrication

### Every 50 hours of operation

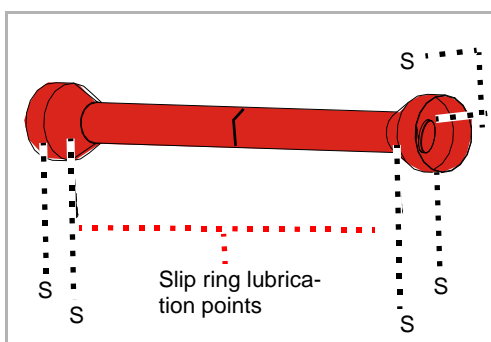

In case of heavy usage or in extreme operating conditions, such as a very dusty environment, more frequent lubrication is required.

- ▶ Lubricate in the universal joint with 1 - 2 strokes of the grease gun.
- ▶ Lubricate on the slip rings with 1 - 2 pumps of the grease gun

### For wide-angle PTO shafts:

The wide-angle joint contains a lubricant reserve which must be filled with 400-500 g [14-17 OZ] of grease.

- ▶ Lubricate with at least 5-6 pumps of the grease gun
- PTO shaft operating manual

# Maintenance

## Replacement

### PTO shafts on the housing


Make sure that you pay attention to the correct installation position when replacing the PTO shafts.




**Pay attention to the installation position of the PTO shafts**

Check the installation position after replacing the PTO shafts.

*If the installation position is incorrect, the PTO shafts will be seriously damaged when switching on the PTO stub shaft.*

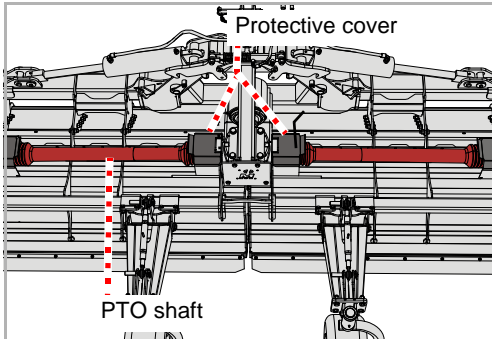

- ▶ Open both protective covers

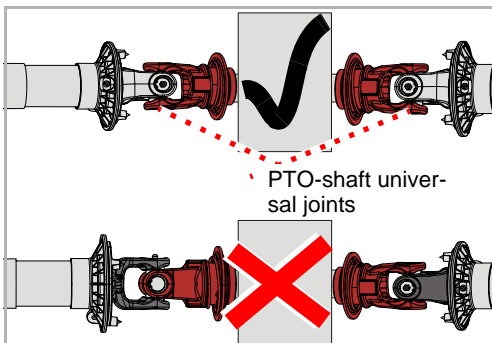


- ▶ Check the installation position on both sides of the PTO shaft

**If the installation position is not the same:**

- ▶ Remove the PTO shaft from the gear box and turn it so that the position of the universal joint matches with the position of the universal joint on the opposite PTO shaft
- ▶ Refit the PTO shaft




## Extension shaft

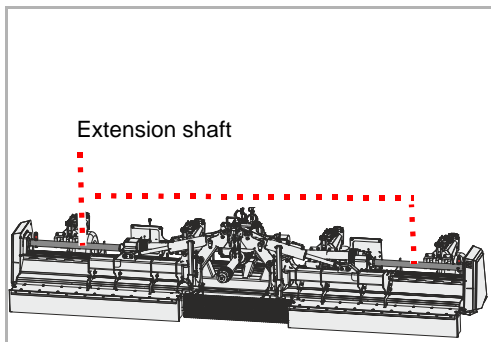

The left extension shaft and the right extension shaft on the machine are mounted in oil. The gearbox oil must conform to the specification.  
→ Chapter »Familiarising yourself with the machine« paragraph »Technical specifications«, page 24

## Check


Twice per season

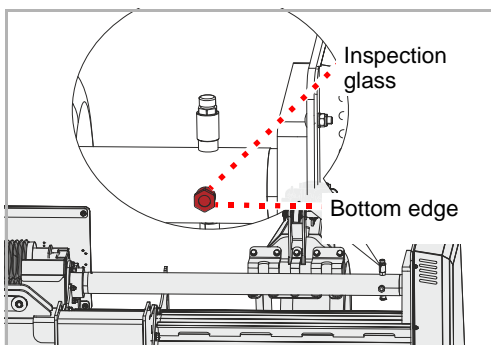

You can check the oil level via an inspection glass.

- ▶ Check the oil level at the inspection glass. The oil level must reach the bottom edge of the inspection glass.
- ▶ Also check the oil level on the opposite side

## Refilling

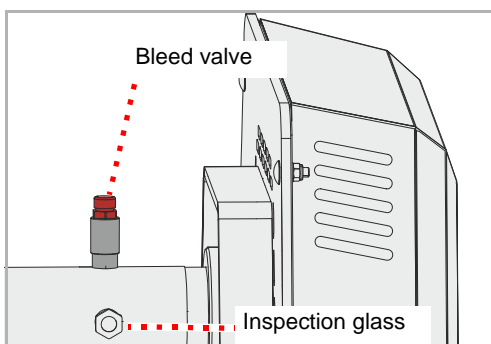

- ▶ Loosen the bleed valve at the inspection opening with a hexagon wrench and take out the bleed valve
- ▶ Use a funnel to fill with gear oil of the appropriate specification until the oil level reaches the bottom edge of the inspection glass
- ▶ Screw the bleed valve back in

# Maintenance


## Transmission oil

The gearbox oil must conform to the specification.

→ Chapter »Familiarising yourself with the machine« paragraph »Technical specifications«, page 24


### Check

Twice per season

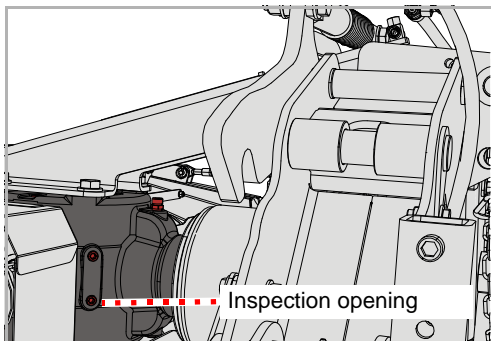

- ▶ Loosen the screw on the inspection opening with an Allen key and remove the screw
- ▶ Check the oil level. The oil level must reach the lower edge of the inspection opening.
- ▶ Retighten the screw at the inspection opening


### Refilling

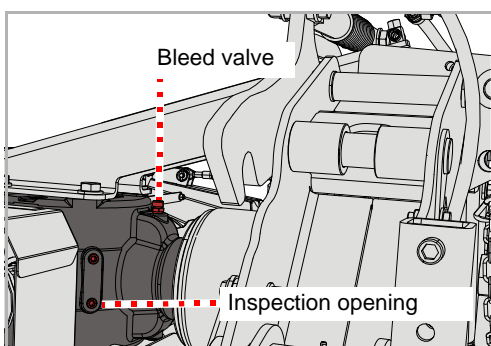

- ▶ Loosen the screw on the inspection opening with an Allen key and remove the screw
- ▶ Unscrew the bleed valve
- ▶ Use a funnel to fill with gear oil of the appropriate specification until the oil level reaches the lower edge of the inspection opening
- ▶ Retighten the screw at the inspection opening
- ▶ Screw the bleed valve back in

## Replacement

1x per season

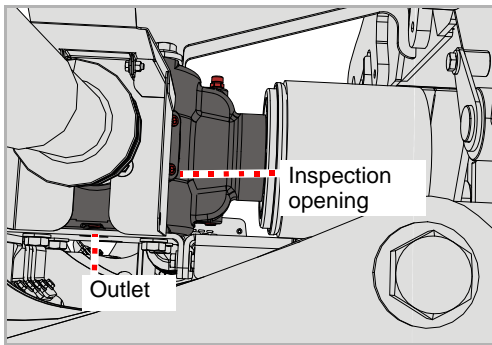

- ▶ Place a collection container under the outlet for the waste oil
  - ▶ Loosen the screw on the inspection opening with an Allen key and remove the screw
  - ▶ Loosen the screw on the outlet with an Allen key and remove the screw
  - ▶ Allow the oil to drain out fully
  - ▶ Replace the screw at the outlet
  - ▶ Using the tractor's control device, move the machine into its work position
  - ▶ Refill with new gear oil
- Section »Refilling«

# Maintenance

## Tools

As required

The tools must be replaced if they:

- Are damaged
- Are heavily worn
- The bore on the tool is worn
- The fastening screws or the fastening nuts are worn

It is important that the rotor runs without unbalance. Therefore:

- Always replace tools with the same type
- Always replace tools opposite each other at the same time
- In case of wear it is best to replace the entire set of tools



### Secure the machine


Work can only be carried out on a machine secured against rolling away and dropping. To prevent dropping, for example, permitted and correctly dimensioned support legs can be used.

*If the machine is not secured against rolling away and dropping, serious or fatal accidents could result.*



### New tools – new nuts and bolts

When replacing the tools, the nuts and bolts must also be replaced. *If the nuts and bolts are not replaced, the worn bolts may break. Tools may become detached during work and be flung out. Even persons outside of the hazard area could be seriously injured or killed.*

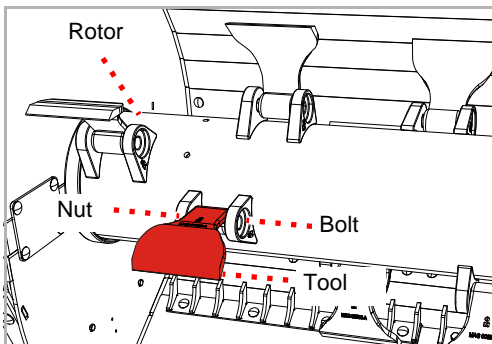


- ▶ Secure the machine against rolling away and dropping
- ▶ Loosen the nuts and remove the bolts
- ▶ Remove old tool
- ▶ Replace new tool in the same manner. If washers were present, insert new washers. Pay attention to the fit of the washers.
- ▶ Fit a new screw and secure with a new nut

## V-belt


As required

### Checking

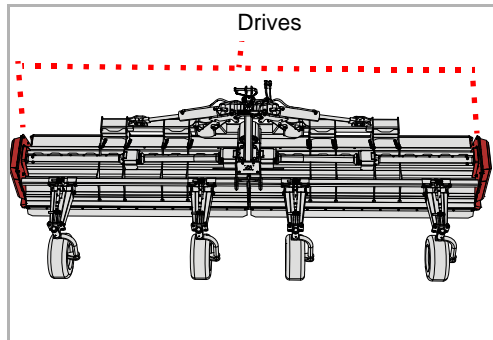


Two drives with V-belts are fitted to the machine.

### V-belt tension

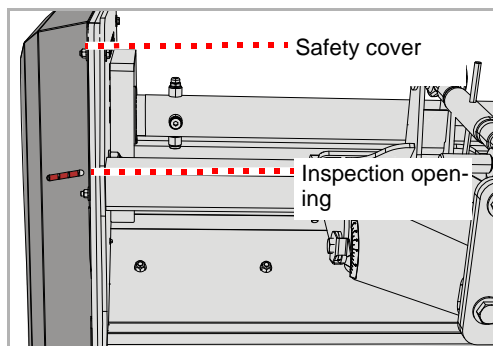


There is an inspection opening in the safety cover.

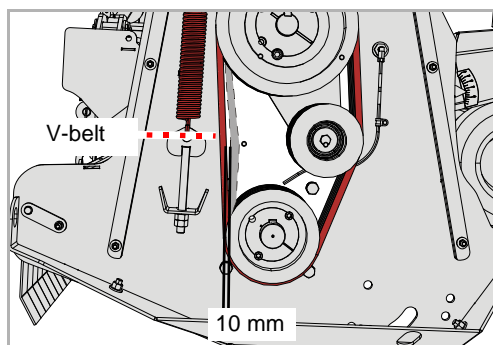

- ▶ The individual V-belts must not be able to be pushed through more than 10 mm under a load of 6 kg.

# Maintenance

## Damage

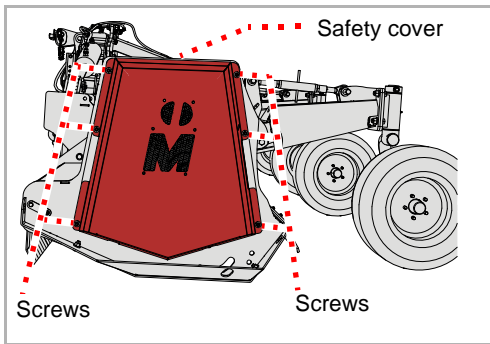


- ▶ Loosen and remove the screws
- ▶ Remove the safety cover
- ▶ Inspect all V-belts for damage
- ▶ Put the cover back on
- ▶ Check the V-belt on the second drive

If there are any tears or individual V-belts are damaged, all the V-belts must be replaced.


→ Section »Replacement«, Page 63

## Tensioning

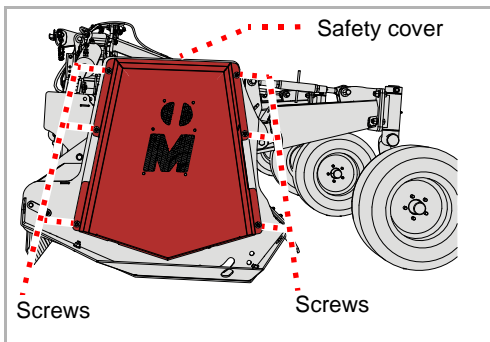

The tension jack is tensioned by a spring. This enables the V-belt to remain correctly tensioned for longer


- ▶ Loosen and remove the screws
- ▶ Remove the safety cover

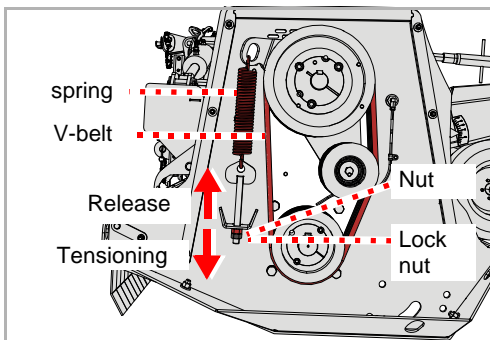


- ▶ Loosen the lock nut
- ▶ Turn the nut so that the spring is tensioned
- ▶ Check the V-belt tension
- ▶ Reassemble the safety cover

## Replacement

If there are any tears or other damage on the V-belt, it must be replaced.

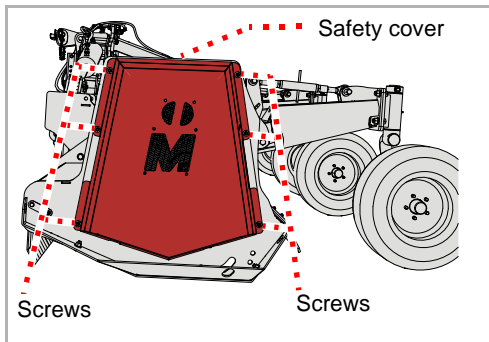

- ▶ Loosen and remove the screws
- ▶ Remove the safety cover

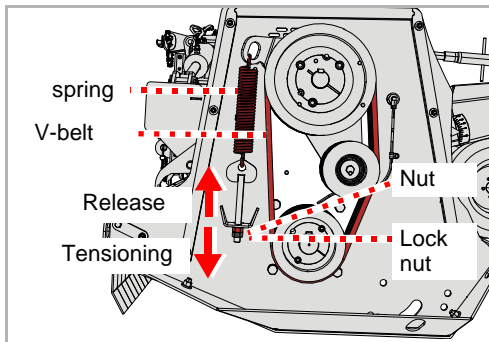

- ▶ Loosen the lock nut
  - ▶ Turn the nut so that the spring tension is relieved
  - ▶ Remove the old drive belt
  - ▶ Fit the new drive belt
  - ▶ Check the V-belt for correct positioning
  - ▶ Tension the V-belt
- Section »Tensioning«, Page 62

# Maintenance

## Runners

As required

The runners protect the machine from direct contact with the ground. If they are not replaced in good time, the housing of the machine will be damaged.




### Secure the machine

Work can only be carried out on a machine secured against rolling away and dropping. To prevent dropping, for example, permitted and correctly dimensioned support legs can be used.

*If the machine is not secured against rolling away and lowering, serious or fatal accidents could result.*

## Right runner

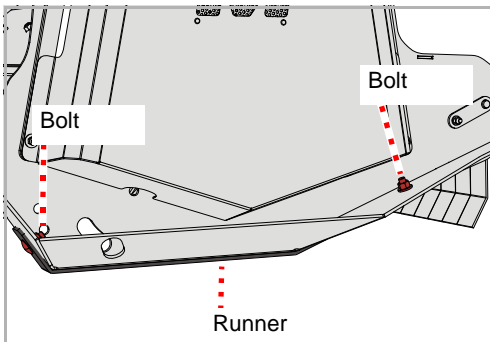


- ▶ Undo nuts, remove screws and washers.
- ▶ Remove old runner
- ▶ Fit new runner
- ▶ Fit new screws and washers
- ▶ Secure screws with new nuts

If the runner also needs to be replaced on the opposite side:

- ▶ Replace the runner on the opposite side as well




## short-chopping bar

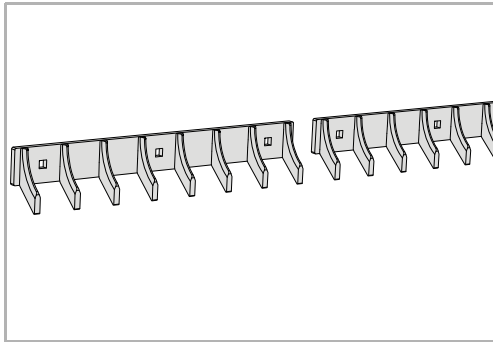

A second counter-cutter makes work easier if the material to be mulched in the field is very long. They guide the material towards the tools, thereby making better cutting possible.

## Cutting bar

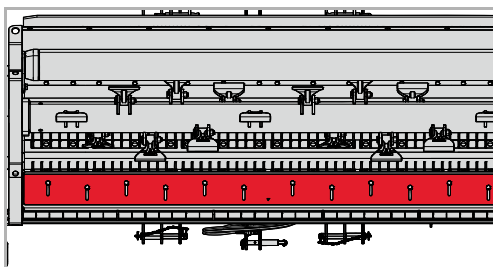


The degree of shredding can be altered using a cutting bar. You can use it to determine how finely the material should be shredded.

## Additional guard


When using of the machine in particularly sensitive areas, the use of an additional guard can be effective. The additional guard consists of a chain curtain in the centre of the machine and a restraining device for the sides.

## Chain curtain

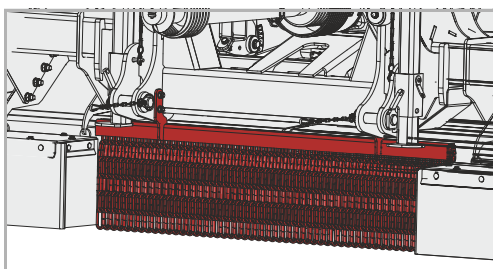

With the chain curtain, foreign bodies are held back particularly effectively in the centre of the machine.

## Restraining device

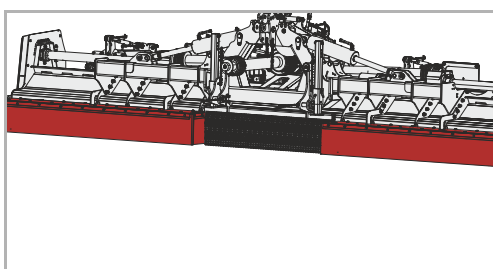


The restraining device is fitted in front of the front stone guard on both sides of the machine.

# Accessory

## Operating hours counter

An electronic operating hours counter displays the actual operating duration. This means that data can be recorded precisely and used, for example, for calculations.

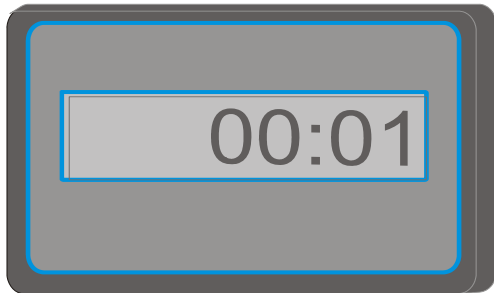

Faults can often be eliminated quickly and easily. In the event of hydraulic problems, first check:

- Are the hydraulic hoses properly connected?
- Is the control valve at the tractor defect?  
If so, contact your dealer.
- Is the hydraulic pump of the tractor defective?  
If so, contact your dealer.

Before calling Customer Service, refer to the table below to check whether the fault is one you can eliminate yourself.

Fault	Cause	Remedy
Strong vibrations and high noise development	Tools are worn	Replace the tools
	One or more tools are missing	Replace tools
	Tools are damaged	Replace the tools
	Bearings for the rotor are worn	Have the bearings replaced
	Foreign bodies, such as wire, are wound around the rotor	Remove foreign bodies
	Tools have become loose	Tighten nuts on screws
	Speed of rotation of the PTO stub shaft is not set correctly	Set the correct speed of rotation on the PTO stub shaft
	Rotor not correctly counterbalanced	Check balancing and rebalance the rotor if necessary
Tools wearing quickly	The tools are working too deeply	Set correct working depth
Material cut too rough and cut material not distributed evenly	Drive speed too high	Reduce the drive speed
	The tools are working too deeply	Set correct working depth
	The tools are working too high	Set correct working depth
	V-belt worn	Replace V-belt set
	V-belt not correctly tensioned	Check V-belt tension and retension if necessary
	Speed of rotation of the tractor PTO stub shaft is too low	Increase the rpm
	Tools are worn	Replace the tools
	The machine is not standing parallel to the ground	Adjust the machine correctly
Rotor does not turn	Rotor is blocked by a foreign body	Remove foreign bodies
	Freewheel on the gear box is mounted incorrectly	Have the free running state correctly assembled

# Fault elimination

Fault	Cause	Remedy
PTO shaft rotating, rotor is not	V-belt torn	Replace the V-belt
Unusual noises from the PTO shaft	Insufficient lubrication	Lubricate the PTO shaft
Gear box overheating	Incorrect oil specification	Change oil and select oil with correct specification
	Oil too old	Change oil
	Oil level too low	Fill the oil to the lower edge of the inspection opening
	Machine overload	Maintain rpm in correct region, adjust driving speed to suit the work, maintain performance area (avoid excessively heavy growth or excessively thick branches)
High wear on V-belts V-belts running hot Power transmission not optimal	The tools are working too deeply and touching the ground	Set correct working depth
	Pulleys not aligned in parallel	Have pulleys correctly aligned
	V-belt is worn	Replace the V-belt
	V-belt is not correctly tensioned	Check the tension jack
Loss of oil at gear box or at centre bearing	Sealing rings worn or damaged	Have sealing rings replaced
Drive elements broken	Machine was started up abruptly or is blocked by foreign bodies	Have defective drive element replaced. Start the machine up slowly.

# Disposal of the machine

When the service life of your machine is over, it must be disposed of properly. Please observe currently valid disposal regulations.

## **Metal parts**

All metal machine components can be sent for metal recycling.

## **Plastic parts**

All plastic parts are marked and can be recycled.


## **Oil**

Collect fluid from the hydraulic system in a suitable container and dispose of at a used oil collection facility.

# EU-conformity declaration

EC Directive  
2006/42/EG

Müthing GmbH & Co. KG Soest  
Am Silberg 23  
D-59494 Soest

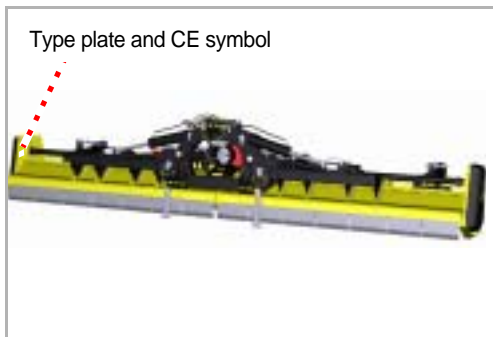

assumes sole responsibility for declaring that the following product complies with EC Directive 2006/42/EC:

MU-M/F Vario and accessories

Assorted samples of harmonized standards:

- DIN EN ISO 4254-1
- DIN EN ISO 4254-12
- EN 13524

Soest, 28.10.2022



Andreas Rohde  
CEO and authorised person for compiling technical documentation


Copy of the type plate/serial number entry

Machine type:	Flail mower
Maschine Name:	
Working width:	
Serial number:	
Year of construction:	

# UK Declaration of Conformity

UKCA

**Müthing GmbH & Co. KG Soest**  
**Am Silberg 23**  
**D-59494 Soest**  
**Germany**

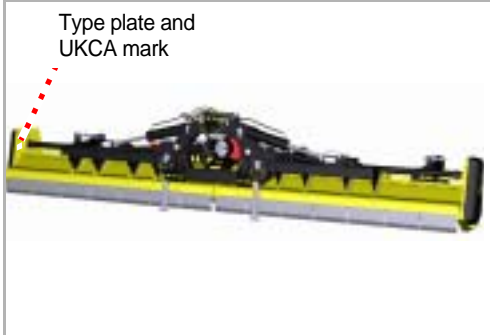

declares under sole responsibility that the machine conforms with the following directives:

- Supply of Machinery (Safety) Regulations 2008

Assorted samples of harmonized standards:

- BS EN ISO 4254-1
- BS EN ISO 4254-12
- BS EN 13524

Machine designation	MU-L/S and additional equipment
---------------------	---------------------------------

The special technical documents corresponding to the machine have been created according to Annex VII, Part B.

Soest, 28.10.2022

Andreas Rohde  
CEO and authorised person for compiling technical documentation

Copy of the type plate/serial number entry

Type of machine: Mulcher

Model:

Working Width:

Machine ID:

Production Year:

# Index

<b>A</b>			
Accessory	65		
Additional guard	65		
Chain curtain	65		
Cutting bar	65		
Operating hours counter	66		
Restraining device	65		
short-chopping bar	65		
Warning signs with lighting device	65		
assembly	23		
<b>C</b>			
Care	41		
Centre of gravity	15		
Cleaning	41		
Connecting			
Electrics	32		
Hydraulics	32		
Coupling	27		
<b>D</b>			
Direction information	13		
<b>E</b>			
Electrics			
Connecting	32		
Employer	8		
<b>F</b>			
Fault	67		
Features	22		
<b>H</b>			
Hydraulics			
Connecting	32		
<b>I</b>			
Instruction	8		
<b>L</b>			
labels, see warning signs			
Lubricate bearings	53		
<b>M</b>			
Machine			
Storing	47		
Maintenance			
General information	49		
Maintenance intervals	52		
Overview of lubrication points	54		
Safety	48		
<b>P</b>			
Pictograms	9		
Protective procedure			
Oils or lubricants	49		
<b>R</b>			
Range of application	21		
Hammer flail	21		
<b>S</b>			
Safety	10		
Agricultural training	13		
Altered driving and braking performance	17		
Care and maintenance intervals	19		
Care and maintenance work	19		
Centre of gravity	15		
Check the screwed connections	20		
Cleaning	20		
Coupling	14		
Proper use	21		
Putting the machine into operation	17		
Riding on the machine	17		
Uncoupling the machine	19		
Warning signs	10		
Welding work	20		
Scope of delivery	26		
Screwed connections	51		
Symbols	9		
<b>T</b>			
Target group	8		
Task	38		
Technical specifications	24		
Tightening torques			
General	51		
Transport without coupling	36		
<b>W</b>			
Warning signs	10, 36		
Meaning	11		
Working width	33		







